

LRC/TLRC Filter Pump

OPERATION/INSTALLATION INSTRUCTIONS

PLEASE read this manual before installing the pump

Before installation, be sure to read all instructions and warnings carefully. Refer to product dataplate(s) for additional operation instruction and specifications.

IMPORTANT SAFETY INSTRUCTIONS

When installing and using this electrical equipment, basic safety precautions should always be followed, including the following:

⚠ WARNING!

RISK OF SUCTION ENTRAPMENT HAZARD WHICH, IF NOT AVOIDED, MAY RESULT IN SERIOUS INJURY OR DEATH.

Pumps can quickly generate high suction, which poses the risk of entrapment if improperly connected to suction outlets. Disembowelment, entrapment, or drowning is possible when body parts or hair contact damaged, cracked, missing, or unsecured drain covers and suction outlets. Pumps and fittings shall be installed in accordance with the latest NSPI or IAF standards, CPSC guidelines, and national, state and local codes, to minimize this risk. Some of those requirements are as follows. Always consult the latest regulations to ensure that your installation meets the necessary requirements to minimize suction entrapment.

- 1. All fully submerged Suction Outlet Covers shall be listed to ANSI/ASME A112.19.8 standard.
- Do not use a pump in an installation where there is only one fully submerged single suction outlet.
- 3. If main drains are installed in your pool, there must be a minimum of two for each pumping system, and each drain must include a Listed Suction Outlet Cover. Wading pools may have additional requirements to minimize entrapment hazards.
- Skimmers may supply 100% of the required flow to the pump, and must be vented to atmosphere. A skimmer is not considered a second main drain.
- 5. When two suction outlets are used, the maximum system flow rate shall not exceed the rating of any one of the listed suction outlet covers installed. When more than two are used, the sum of the ratings shall be at least twice the maximum system flow rate.
- 6. Each Suction Outlet Cover shall be separated by a minimum of three feet (3'), measured from center of suction pipes.
- Avoid installing check valves. If check valves must be used, ensure that the installation conforms to applicable standards.
- 8. Never use the pool or spa if a Suction Outlet Cover is damaged, cracked, missing, or not securely attached. Suction outlet cover must be attached with stainless steel screws supplied with the cover. If screws are lost, order replacement parts from your supplier.

NOTE: For the latest NSPI or IAF Standards, contact the Association of Pool and Spa Professionals (APSP) at www.theapsp.org or (703) 838-0083, ext. 301. For the latest Consumer Product Safety Commission (CPSC) Guidelines, contact the CPSC at www.cpsc.gov or (301) 504-7923. "Guidelines for Entrapment Hazards: Making Pools and Spas Safer" can be viewed at www.cpsc.gov/cpscpub/pubs/363.pdf

⚠ WARNING!

To reduce risk of injury, do not permit children to use this product unless they

are closely supervised at all times.

MARNING!

(For cord & plug connected units)

Risk of Electric Shock, Connect only to

a grounding type receptacle protected by a ground-fault circuit-interrupter (GFCI). Contact a qualified electrician if you cannot verify that the receptacle is protected by a GFCI.

⚠ WARNING!

(For cord & plug connected units) Do not bury cord. Locate cord to minimize

abuse from lawn mowers, hedge trimmers and other equipment.

⚠ WARNING!

(For cord & plug connected units) To reduce the risk of electric shock, if the

cord is damaged, replace it immediately with the same type of cord which is available from your local dealer. The new cord must be installed by a qualified electrician. Inspect the cord annually.

⚠ WARNING!

(For hot tub and spa pumps) Do not install within an outer enclosure or be-

neath the skirt of the hot tub or spa, unless so marked.

⚠ WARNING!

(For cord & plug connected units) To reduce the risk of electric shock, do not

use an extension cord to connect unit to electric supply; provide a properly located outlet.

↑ WARNING!

Locate the pump at least five feet (1.5M) from the pool to prevent it being

used as a means of access to the pool by young children. (See ANSI/NSPI-8 1996 "Model Barrier Code For Residential Swimming Pools, Spas and Hot Tubs").

The following caution applies only to installations in the U.S.A.

⚠ WARNING!

This pump is for use with storable pools only. Do not use with permanently

installed pools. A storable pool is constructed so that it may be readily disassembled for storage and reassembled to its original integrity. A permanently installed pool is constructed in or on the ground or in a building such that it cannot be readily disassembled for storage.

IMPORTANT

This product has been carefully inspected and packed at our factory. As the carrier has assumed full responsibility for its safe arrival, any claim for damage to the shipment, either visible or concealed, must be made on the carrier.

GENERAL

This is a self-priming pump, which means that it can raise water to itself through a dry suction line without using valves, provided the pump case

and strainer body are full of water before the motor is started. Its self-priming ability exceeds the requirements of Standard No. 17 of the National Sanitation Foundation. Nevertheless, we recommend the use of a swing check valve in the suction pipe, at or below water level, if the suction lift is more than 5 feet (1.5m) or if the dry suction line would be more than 10 feet (3.0 m) long. This arrangement makes the initial priming easy and keeps the suction pipe primed at all times. The pump is built from glass-reinforced thermoplastic mouldings. These eliminate all corrosion problems and insulate the water passages from the electric motor. A closed impeller, which requires no field adjustment to maintain efficiency, runs inside a multi-vane diffuser built into pump case. Ample running clearances between impeller and case promote long life and prevent seizure should sand enter the pump. The impeller hub forms an insulating sleeve over the motor shaft and carries the mechanical shaft seal. This seal, which has a pure-carbon rotating face working against a ceramic seat, requires no attention until leakage at the shaft shows that replacement is necessary. For easy routine servicing, the built-in hair and lint strainer has a transparent cover. For easy access to the working parts, the removal of six small bolts allows the motor, bracket, seal, and impeller to be withdrawn as a unit, leaving the pump case and its base in place with the piping undisturbed.

INSTALLATION

Locate the pump as close to the pool as possible, but keep at a minimum distance of at least five feet (1.5M) to prevent it being used as a means of access to the pool by young children (See previous Warning). Locate the pump preferably in a dry, shaded, and well-ventilated area. Should it be impossible to put the pump at or below deck level, choose the lowest possible position. This simplifies priming, and adds to the pressure developed by the pump. Prepare a hard, level surface that is large enough to accommodate the associated equipment. Bear the following in mind: Drainage of the filter room or pit; Ventilation of the motor; Access for servicing and winterizing the equipment; Protection of the equipment,

The pump has female sockets to receive 1-1/2" NPT (38mm) threaded fittings. Keep the piping as simple as possible, and avoid connecting an elbow directly to the pump inlet (use a length of straight pipe to allow a proper entry of the water). Keep as much of the suction pipe as possible below the water level of the pool because this will reduce the priming time, but arrange the pipe to rise continuously toward the pump to prevent high spots that could form air pockets. Support the pipes independently so that they do not place strain on the pump. Install gate valves in the pump suction and pool return lines close to the filter system for convenient servicing of the equipment. These valves are essential if the equipment is installed below deck level. Keep the gate valve in the suction line fully open during operation, and make sure that its gland is kept tight to prevent the entrance of air around the valve stem. Take care during installation to keep the pipes clean, and make sure that the suction system is absolutely airtight.

MOTOR DETAILS

PUMP MODEL	HP RA	STREET, STREET	VOLTAGE	MAX. FULL-LOAD CURRENT	MAX. kW OUTPUT
5LRC-SI	1/2			8.6A	0.37
7LRC-S1				10A	0.56
7LRC-5-S1	3/	4		8.6A	0.37
1LRC-5-S1	lage that the principle		445	9A	0.37
15LRC-5-S1	1-1	/2	115	9A	0.37
15TLRC-5-S1	1-1/2	1/5		9A	0.37
15LRC-7-S1	1-1/2		square 1 - 1	10A	0.56
15TLRC-7-S1	1-1/2	1/5	Mar III	10A	0.56

ELECTRICAL CONNECTIONS

Check that the information on the pump nameplate corresponds to the power supply. Employ a competent electrician to make the wiring installation in accordance with the local electrical code. Every motor requires a fused disconnect switch. LRC pumps are suitable for 115V only. LRC pumps are equipped with a splash cover and a 25 foot (7.5m) three conductor cord ending with a three-pin grounding plug.



Never run the pump without water in the pump case because lack of water can

STARTING UP

For 2-speed pumps, start and prime the pump at HIGH SPEED only. Do not change to LOW SPEED before the pump is working properly. At HIGH SPEED (3450 rpm approx.), the motor develops its full horsepower and the pump generates high capacity and pressure. Use high speed for maximum filtration at peak periods and whenever turbidity levels are high. At other times switch to LOW SPEED (1725 rpm approx.). For backwashing and vacuuming, HIGH SPEED is required. If the pump is supplied as part of a complete filter system, follow the starting-up procedure described in the separate instructions for the complete filter system. In other cases, proceed as follows:

- 1). Close the gate valves in the suction and return lines. Remove the cover from the hair and lint strainer and fill the pump completely with water. Replace the cover.
- 2). Open the gate valves in the suction and return lines and start the pump. If the pump fails to produce a full flow of water within four or five minutes, switch off the power and repeat Step 1. If the pump still fails to work, check for air leaks at the strainer cover, suction line connections, and valve stem glands before repeating Step 1.
- 3). After about ten minutes of operation check the pool return fittings for air bubbles. A continuous flow of air indicates leaks in the suction line. Locate and correct any leaks immediately.

CONTROLLING THE OUTPUT

Keep the gate valve in the suction line fully open during operation. Should it be necessary to control the output, use a valve in the return line.

CLEANING THE HAIR AND LINT STRAINER

Switch off the power. Close the valves in the suction and return lines. Remove the Ring-Lok and cover and lift out the strainer basket. Clean and replace the basket. Take care to seat the O-ring properly. Place cover back on, replace Ring-Lok (hand-tighten only) and re-open valves. Put pump back into operation.

NOTE: Do not re-tighten Ring-Lok during operation.

LUBRICATION

The pump requires no lubrication.

There is a drain plug on the pump case. Note that the valves in the suction and return lines must be open to allow complete draining of the pump, but that other provisions may be necessary for draining the filter, heater, and pipe lines.

MAINTENANCE

The pump can be serviced without breaking the pipe connections. Close the gate valves, SWITCH THE ON/OFF SWITCH TO OFF AND PULL THE PLUG FROM THE RECEPTACLE before starting work on the pump.



During periods when the pump is not in use, and always during servicing, switch the ON/OFF switch to OFF and pull the plug from the receptacle.

NOTE: THE PUMP SHALL BE SERVICED BY QUALIFIED PERSONNEL ONLY.

TO DISMANTLE PUMP

NOTE: VERIFY THE ELECTRICAL POWER IS DISCONNECTED BEFORE YOU CONTINUE. Note: Numbers in brackets refer to item numbers in Figure 2.

- 1). Remove the back plate (26) by taking out four self-tapping screws (27).
- 2). Disconnect the black wire (25) from the switch (22).
- 3). Remove the splash cover (16) by taking out three self-tapping screws (17).
- 4). To gain access to the motor shaft, remove the motor cover by removing one screw. There is no need to disconnect the power cord (24) from the motor (1), unless the motor or the power cord is to be replaced or repaired.
- 5). Remove the six screws (8) and nuts (9) that hold the pump together, and withdraw the motor (1), bracket (5), seal (4) and impeller (6) from the pump case as a unit.
- 6). Prevent the motor shaft from rotating by inserting a screwdriver in the slot in the end of the shaft at the back of the motor, and unscrew the impeller (6).
- 7). Remove the four long screws that hold the motor (1) to the bracket (5).

INSPECTION

Inspect all parts of the pump for wear or damage, and order replacements as necessary. Check the shaft seal (4) carefully. Look for cracks in the ceramic seat. Check the seal faces for wear and nicks. Flex the rubber parts and check them for holes and cracks. Replace the complete seal if any part is damaged, or if the seal leaks. Do not use old parts.

SHAFT SEAL REPLACEMENT

Take great care while handling the shaft seal (4) to avoid damage to its carbon and ceramic sealing faces.

TO REMOVE OLD SHAFT SEAL

After dismantling the pump and removing the impeller as already described, pull the rotating parts of the seal from the hub of the impeller (6). Press or tap the stationary section of the seal from the bracket (5).

TO FIT NEW SEAL

DO NOT USE OIL OR GREASE ON THE SEAL PARTS, because either may damage the thermoplastic material of the pump through overheating or chemical reaction. Make sure that the pump parts are clean, but be careful not to scratch the surfaces that come into contact with the seal. Moisten the rubber cup of the new stationary section with WATER. Protect the sealing surface with a disc of clean cardboard, and use a light mallet and small wooden block to tap the seal gently into the bracket (5). Be sure that the sealing surface faces the pump. Reassemble the bracket (5) onto the motor (1). Moisten the bore of the new rotating seal assembly with WATER. Push the assembly into position on the hub of the impeller (6) with its sealing surface facing outward. Prevent the motor shaft from rotating by inserting a screwdriver in the slot in the end of the shaft at the back of the motor, and screw the impeller (6) to the shaft by hand. Make sure that the square ring

gasket (7) is properly positioned in its groove on the face of the bracket (5), then reassemble the bracket (5) to the pump case (10). Apply even tension to the screws (8) and nuts (9) by tightening opposite pairs in turn. Reassemble the splash cover. Reinstall the pump and run it for 5 minutes to ensure that no water leaks from the pump case (which would indicate improper seal installation). If any water is observed leaking from the pump case, repeat seal installation procedure.

TROUBLE SHOOTING

MOTOR DOES NOT START:

Disconnect switch open; Fuses blown or thermal overload open; Motor windings burned out; Defective starting switch inside motor; Disconnected or defective wiring.

MOTOR DOES NOT REACH FULL SPEED:

Low voltage; Motor windings connected for wrong voltage; Shaft binding or impeller rubbing.

MOTOR OVERHEATS (Protector trips):

Low voltage; Motor windings connected for wrong voltage; Inadequate ventilation.

PUMP DELIVERS NO WATER:

Pump not primed; Closed valve in suction or discharge line; Suction or discharge line plugged; Leakage of air into suction system; Impeller plugged.

LOW PUMP CAPACITY:

Check setting of dial valve; Valve in suction or discharge line partly closed; Suction or discharge line partly plugged; Suction or discharge line too small; Pump running at reduced speed (see above); Plugged basket in skimmer or hair in lint strainer; Dirty filter; Impeller plugged.

LOW PUMP PRESSURE:

Check setting of dial valve; Pump running at reduced speed (see above); Discharge valve or inlet fitting opened too much; Leakage of air into suction system.

HIGH PUMP PRESSURE:

Discharge valve or inlet fittings closed too much; Return lines too small; Dirty filter.

NOISY PUMP AND MOTOR:


Plugged basket in skimmer or hair in lint strainer; Defective motor bearings; Valve in suction line partly closed; Suction line partly plugged; Vacuum cleaner hose plugged or too small; Piping causing strain on pump case; Impeller rubbing on pump case.


LEAKAGE OF WATER AT SHAFT:

Shaft seal requires replacement.

AIR BUBBLES AT INLET FITTINGS:

Leakage of air into suction line at connections; Cover of hair and lint strainer not airtight; Restriction in suction line; Low water level in pool.

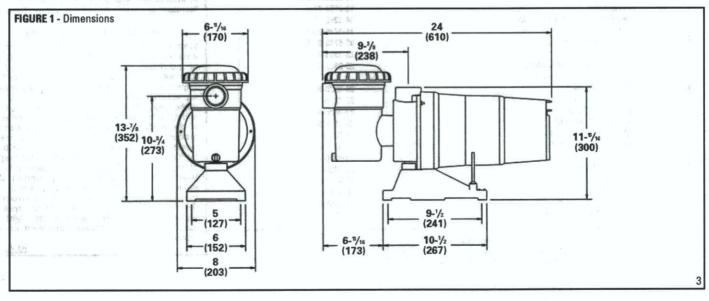

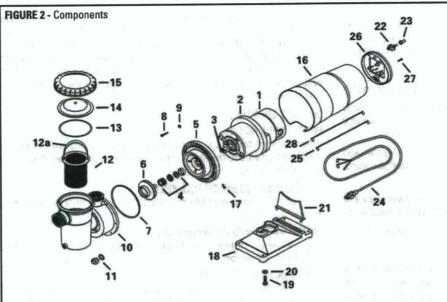

Notor Contact your local pool dealer					
22 Gasket 3 Flinger 4 Mechanical Shaft Seal Assy. 5 Bracket 6 Impeller for: Model 5LRC-S1 Model 7LRC-5-S1 Model 1LRC-5-S1 Model 1LRC-5-S1 Model 1SLRC-5-S1 Model 1SLRC-7-S1 Mod	Item	Description		Part Number	
3 Filinger 4 Mechanical Shaft Seal Assy. 5 Bracket 6 Impeller for: Model 5LRC-S1 Model 1LRC-5-S1 Model 1LRC-5-S1 Model 1SLRC-S-S1 Model 1SLRC-S-S1 Model 1SLRC-S-S1 Model 1SLRC-S-S1 Model 1SLRC-S-S1 Model 1SLRC-S-S1 Model STRC-S-S1 Model	1	Motor (Contact your local pool dealer)			
4 Mechanical Shaft Seal Assy. 5 Bracket 6 Impeller for:	2	Gasket			
5 Bracket 6 Impeller for: Model SLRC-S1 Model TLRC-5-S1 Model TLRC-5-S1 Model TLRC-5-S1 Model SLRC-5-S1 Model SLRC-5-S1 Model SLRC-5-S1 Model SLRC-5-S1 Model SLRC-5-S1 Model STLRC-5-S1 Model STLRC-5-S1 Model STLRC-7-S1 Model STLRC-7-S1 Model STLRC-7-S1 Model STLRC-7-S1 Model STLRC-7-S1 Model STLRC-7-S1 7 Square Ring Gasket 8 Hex Washer Head Screw 10-24 x 1-1/4" Lg (6 per bag) Hex Washer Head Screw 10-24 x 1-1/4" Lg (100 per bag) Hex Hange Nut #10-24 (100 per bag) Hex Flange Nut #10-24 (100 per bag) Hex Flange Nut #10-24 (100 per bag) 10 Strainer/Case Assembly 11 Drain Plug and Gasket (2 per bag) 12 Drain Plug and Gasket (50 per bag) 13 1-1609-06-R2 Drain Plug and Gasket (50 per bag) 12 Strainer Basket with handle 16-0729-02-R 13 Strainer O-ring 14 Strainer Cover 15 Strainer Nut 16 Splash Cover 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 18 Pump Base 19 Hex Cap Screw #8 x 1/2" Lg (3 per bag) 19 Hex Cap Screw #8 x 1/2" Lg (3 per bag) 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 10 Washer 11 Drain Plug for: 12 Model SLRC-5-48-S1 13 Model SLRC-5-48-S1 14 Model SLRC-5-48-S1 15 Model SLRC-5-48-S1 16 Model SLRC-5-48-S1 17 Model SLRC-5-48-S1 18 Model SLRC-5-48-S1 19 Model SLRC-5-48-S1 10 Model SLRC-5-48-S1 11 Model SLRC-5-48-S1 12 -8328-60-R 15 Insulated Wire (Black) 19 Hex Cap Screw #8 x 3/4" Lg (4 per bag) 10 Sagara-70-R 10 Sagara-70-R 10 Sagara-70-R 10 Sagara-70-R 11 Sagara-70-R 11 Sagara-70-R 12 Sagara-70-R 12 Sagara-70-R 13 Sagara-70-R 14 Sagara-70-R 15 Sagara-70-R 16 Sagara-70-R 17 Pan Head Screw #8 x 3/4" Lg (4 per bag)	3	Flinger			
5 Bracket 6 Impeller for: Model SLRC-S1 Model TLRC-5-S1 Model TLRC-5-S1 Model TLRC-5-S1 Model SLRC-5-S1 Model SLRC-5-S1 Model SLRC-5-S1 Model SLRC-5-S1 Model SLRC-5-S1 Model STLRC-5-S1 Model STLRC-5-S1 Model STLRC-7-S1 Model STLRC-7-S1 Model STLRC-7-S1 Model STLRC-7-S1 Model STLRC-7-S1 Model STLRC-7-S1 7 Square Ring Gasket 8 Hex Washer Head Screw 10-24 x 1-1/4" Lg (6 per bag) Hex Washer Head Screw 10-24 x 1-1/4" Lg (100 per bag) Hex Hange Nut #10-24 (100 per bag) Hex Flange Nut #10-24 (100 per bag) Hex Flange Nut #10-24 (100 per bag) 10 Strainer/Case Assembly 11 Drain Plug and Gasket (2 per bag) 12 Drain Plug and Gasket (50 per bag) 13 1-1609-06-R2 Drain Plug and Gasket (50 per bag) 12 Strainer Basket with handle 16-0729-02-R 13 Strainer O-ring 14 Strainer Cover 15 Strainer Nut 16 Splash Cover 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 18 Pump Base 19 Hex Cap Screw #8 x 1/2" Lg (3 per bag) 19 Hex Cap Screw #8 x 1/2" Lg (3 per bag) 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 10 Washer 11 Drain Plug for: 12 Model SLRC-5-48-S1 13 Model SLRC-5-48-S1 14 Model SLRC-5-48-S1 15 Model SLRC-5-48-S1 16 Model SLRC-5-48-S1 17 Model SLRC-5-48-S1 18 Model SLRC-5-48-S1 19 Model SLRC-5-48-S1 10 Model SLRC-5-48-S1 11 Model SLRC-5-48-S1 12 -8328-60-R 15 Insulated Wire (Black) 19 Hex Cap Screw #8 x 3/4" Lg (4 per bag) 10 Sagara-70-R 10 Sagara-70-R 10 Sagara-70-R 10 Sagara-70-R 11 Sagara-70-R 11 Sagara-70-R 12 Sagara-70-R 12 Sagara-70-R 13 Sagara-70-R 14 Sagara-70-R 15 Sagara-70-R 16 Sagara-70-R 17 Pan Head Screw #8 x 3/4" Lg (4 per bag)	4	Mechanical Shaft Seal Assy.			
6 Impeller for: Model 5LRC-51 Model 7LRC-5-S1 Model 7LRC-5-S1 Model 1LRC-5-S1 Model 1LRC-5-S1 Model 15LRC-5-S1 Model 15LRC-5-S1 Model 15LRC-5-S1 Model 15LRC-5-S1 Model 15LRC-5-S1 Model 15LRC-7-S1 Model 15LRC-7-S1 Model 15LRC-7-S1 Model 15LRC-7-S1 Square Ring Gasket Hex Washer Head Screw 10-24 x 1-1/4" Lg (6 per bag) Hex Washer Head Screw 10-24 x 1-1/4" Lg (6 per bag) Hex Flange Nut #10-24 (100 per bag) Trainer/Case Assembly Drain Plug and Gasket (2 per bag) Drain Plug and Gasket (50 per bag) Strainer Basket Handle Strainer Basket Handle Strainer Basket Handle Strainer Flander Strainer Flander Strainer Flander Strainer Flander Toggle Switch Pan Head Screw #8 x 1/2" Lg (3 per bag) Hex Cap Screw #3/8-16 x 1-1/4" Lg Washer Motor Support Bracket Toggle Switch 1 Piece Rubber Boot and Nut Power Cord with Plug for: Model 5LRC-48-S1 Model 7LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-7-8-S1 Model 15LRC-9-8-S1 Model 15LRC-9-8-S1 Model 15LRC-9-8-S1 Model 15LRC-9-8-S1 Model 15LRC-9-8-S1 Model 15LRC-9-9-S1 Model 15LRC-9-9-S1 Model 15LRC-9-9-S1 Model 15LRC-9-9-S1 Model 15LRC-9-9-S1 Model 15LRC-9-9-S1	5	Bracket		02-2545-14-R	
Model TLRC-5-S1 Model 1LRC-5-S1 Model 1SLRC-5-S1 Model 1SLRC-5-S1 Model 1SLRC-5-S1 Model 1SLRC-5-S1 Model 1SLRC-7-S1 Model 1SLRC-7-S1 Model 1SLRC-7-S1 Square Ring Gasket 8 Hex Washer Head Screw 10-24 x 1-1/4" Lg (6 per bag) Hex Washer Head Screw 10-24 x 1-1/4" Lg (100 per bag) 9 Hex Flange Nut #10-24 (6 per bag) Hex Flange Nut #10-24 (100 per bag) 14-3971-03-R6 Hex Flange Nut #10-24 (100 per bag) 14-3971-03-R6 Hex Flange Nut #10-24 (100 per bag) 15 Strainer/Case Assembly 16 C0300-09-R 17 Drain Plug and Gasket (2 per bag) 18 Strainer Basket with handle 19 Strainer Basket with handle 10 Strainer Basket with handle 11 Strainer O-ring 12 Strainer Basket Handle 13 Strainer O-ring 14 Strainer Cover 15 Strainer Nut 16 Splash Cover 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 18 Pump Base 19 Hex Cap Screw #8/8-16 x 1-1/4" Lg Washer 19 Hex Cap Screw #8/8-16 x 1-1/4" Lg Washer 10 Washer 11 Toggle Switch 12 Surainer Cover 12 Toggle Switch 13 Strainer O-ring 14 -2256-01-R3 15 Model TLRC-5-8-S1 Model TLRC-7-48-S1 Model TLRC-7-48-S1 Model TLRC-7-8-S1	6				
Model 7LRC-5-S1 Model 1LRC-5-S1 Model 15LRC-5-S1 Model 15LRC-5-S1 Model 15LRC-5-S1 Model 15LRC-7-S1 Model 15LRC-7-S1 Model 15LRC-7-S1 Model 15LRC-7-S1 Model 15LRC-7-S1 Model 15LRC-7-S1 Square Ring Gasket 7 Square Ring Gasket 8 Hex Washer Head Screw 10-24 x 1-1/4" Lg (6 per bag) Hex Washer Head Screw 10-24 x 1-1/4" Lg (100 per bag) 14-2223-01-R6 Hex Washer Head Screw 10-24 x 1-1/4" Lg (100 per bag) 14-3971-03-R6 Hex Flange Nut #10-24 (100 per bag) 14-3971-03-R100 15 Strainer/Case Assembly 16-0300-09-R 17 Drain Plug and Gasket (2 per bag) 18-1609-06-R2 Drain Plug and Gasket (50 per bag) 19-1609-06-R2 10-1609-06-R2 11 Strainer Basket with handle 10-0729-02-R 11 Strainer O-ring 11 Strainer O-ring 12 Strainer Basket Handle 13 Strainer O-ring 14 Strainer Cover 15 Strainer Nut 16 Splash Cover 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 19-0753-04-R 10 Splash Cover 19-16-08-09-R 10 Pan Head Screw #8 x 1/2" Lg (3 per bag) 11-256-07-R 12 Motor Support Bracket 12 Toggle Switch 12 Toggle Switch 13 Strainer O-ring 14 L-226-01-R3 15 Model 1LRC-5-48-S1 Model 7LRC-48-S1 Model 7LRC-5-8-S1 Model 15LRC-7-48-S1 Model 15LRC-7-48				05-3911-07-R	
Model 1RRC-5-S1 Model 1SLRC-5-S1 Model 1SLRC-5-S1 Model 1SLRC-5-S1 Model 1SLRC-7-S1 Model 1SLRC-7-S1 Model 1SLRC-7-S1 Model 1SLRC-7-S1 Model 1SLRC-7-S1 Model 1SLRC-7-S1 7 Square Ring Gasket 8 Hex Washer Head Screw 10-24 x 1-1/4" Lg (6 per bag) Hex Washer Head Screw 10-24 x 1-1/4" Lg (100 per bag) Hex Flange Nut #10-24 (6 per bag) Hex Flange Nut #10-24 (100 per bag) 14-3971-03-R6 Hex Flange Nut #10-24 (100 per bag) 14-3971-03-R6 Hex Flange Nut #10-24 (100 per bag) 15 Strainer Plug and Gasket (2 per bag) 16 C0300-09-R 17 Drain Plug and Gasket (2 per bag) 18 Strainer Basket with handle 19 Strainer Basket with handle 19 Strainer Basket with handle 10 Strainer Cover 11 Strainer Cover 12 Strainer Basket Handle 13 Strainer Cover 14 Strainer Cover 15 Strainer Nut 16 Splash Cover 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 18 Pump Base 19 Hex Cap Screw #8/8-16 x 1-1/4" Lg 14 Hay 1-126-13-R 15 Undot Support Bracket 17 Drain Plug for: 18 Motor Support Bracket 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 10 Washer 11 Toggle Switch 12 Sassa-70-R 12 Model TLRC-5-48-S1 12 Model TLRC-5-48-S1 13 Model TLRC-5-48-S1 14 Model TLRC-5-48-S1 15 Model TLRC-7-48-S1 16 Model TLRC-7-48-S1 17 Model TLRC-7-48-S1 18 Model TLRC-7-48-S1 19 Model TLRC-7-48-S1 10 Model TLRC-7-48-S1 10 Model TLRC-7-48-S1 11 Nodel TLRC-7-48-S1 12 -8328-70-R 13 Black Plate 14 -2365-99-R4 14 -2365-99-R4				05-3911-07-R	
Model 15LRC-5-S1 Model 15TLRC-5-S1 Model 15TLRC-7-S1 Model 15TLRC-7-S1 Model 15TLRC-7-S1 Model 15TLRC-7-S1 7				05-3911-07-R	
Model 15TLRC-5-S1 05-3911-07-R Model 15TLRC-7-S1 05-3912-06-R Model 15TLRC-7-S1 05-3912-06-R 7 Square Ring Gasket 13-1255-05-R 8 Hex Washer Head Screw 10-24 x 1-1/4" Lg (6 per bag) 14-2223-01-R10 9 Hex Flange Nut #10-24 (6 per bag) 14-3971-03-R6 Hex Flange Nut #10-24 (100 per bag) 14-3971-03-R6 Hex Flange Nut #10-24 (100 per bag) 14-3971-03-R6 Hex Flange Nut #10-24 (100 per bag) 14-3971-03-R6 10 Strainer/Case Assembly 16-0300-09-R 11 Drain Plug and Gasket (50 per bag) 31-1609-06-R2 12 Strainer Basket Handle 89-7303-10-R 12 Strainer Basket Handle 89-7303-10-R 13 Strainer O-ring 39-0753-04-R 14 Strainer O-ring 39-0753-04-R 15 Strainer Nut 42-1678-09-R 16 Splash Cover 85-8733-10-R 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 14-2256-01-R3 18 Pump Base 12-2506-27-R 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 14-1296-13-R 20 </td <td></td> <td></td> <td></td> <td>05-3911-07-R</td> <td></td>				05-3911-07-R	
Model 15TRC-7-S1 05-3912-06-R Model 15TLRC-7-S1 05-3912-06-R 7 Square Ring Gasket 13-1255-05-R 8 Hex Washer Head Screw 10-24 x 1-1/4" Lg (100 per bag) 14-2223-01-R6 Hex Flange Nut #10-24 (6 per bag) 14-3971-03-R6 Hex Flange Nut #10-24 (100 per bag) 14-3971-03-R6 Hex Flange Nut #10-24 (100 per bag) 14-3971-03-R6 10 Strainer/Case Assembly 16-0300-09-R 11 Drain Plug and Gasket (2 per bag) 31-1609-06-R0 12 Strainer Basket with handle 16-0729-02-R 12 Strainer Basket Handle 89-7303-10-R 13 Strainer Cover 39-0753-04-R 14 Strainer Cover 47-0352-09-R 15 Strainer Nut 42-1678-09-R 16 Splash Cover 85-8733-10-R 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 14-2256-01-R3 18 Pump Base 12-2506-27-R 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 14-1296-13-R 20 Washer 14-0740-25-R 21 Motor Support Bracket 23-1993-00-R 22				05-3911-07-R	
Model 15TLRC-7-S1				05-3912-06-R	
7 Square Ring Gasket 8 Hex Washer Head Screw 10-24 x 1-1/4" Lg (6 per bag) Hex Washer Head Screw 10-24 x 1-1/4" Lg (100 per bag) 9 Hex Flange Nut #10-24 (6 per bag) 14-2223-01-R100 14-3971-03-R6 Hex Flange Nut #10-24 (100 per bag) 10 Strainer/Case Assembly 11 Drain Plug and Gasket (2 per bag) Drain Plug and Gasket (50 per bag) 12 Strainer Basket with handle 13 Strainer O-ring 14 Strainer Cover 15 Strainer Nut Strainer Nut Strainer Nut Splash Cover 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 18 Pump Base 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg Washer 20 Washer 21 Motor Support Bracket 22 Toggle Switch 23 1 Piece Rubber Boot and Nut 24 Power Cord with Plug for: Model 7LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-7-48-S1 Model 15TLRC-7-48-S1		() 하게 하지하다 전략하다 전략하다 () () () () () () () () () (05-3912-06-R	
Hex Washer Head Screw 10-24 x 1-1/4" Lg (6 per bag)	7			13-1255-05-R	
Hex Washer Head Screw 10-24 x 1-1/4" Lg (100 per bag) Hex Flange Nut #10-24 (6 per bag) Hex Flange Nut #10-24 (100 per bag) 14-3971-03-R16 10 Strainer/Case Assembly 11 Drain Plug and Gasket (2 per bag) Drain Plug and Gasket (50 per bag) 12 Strainer Basket with handle 16-0729-02-R 13 Strainer O-ring 14 Strainer Cover 15 Strainer Cover 16 Splash Cover 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 18 Pump Base 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 19 Washer 10 Motor Support Bracket 10 Toggle Switch 11 Piece Rubber Boot and Nut 12 Power Cord with Plug for: 13 Model 7LRC-5-48-S1 14 Model 15LRC-5-48-S1 15 Model 15TLRC-5-48-S1 16 Model 15TLRC-7-48-S1 17 Model 15TLRC-7-48-S1 18 Model 15TLRC-7-48-S1 19 Model 15TLRC-7-48-S1 10 Model 15TLRC-7-48-S1 11 Nead Screw #8 x 3/4" Lg (4 per bag) 14-2236-09-R4 14-3971-03-R10 14-3971-03-R10 14-3971-03-R10 15-600-08-R2 15-60729-02-R 16-07029-02-R 17-1609-06-R50 17-1609-06-R50 18-07333-10-R 18-0733-10-R 18-		Hex Washer Head Screw 10-24 x 1-1/4" Lo (6 per ba	a)	14-2223-01-R6	
9		Hey Washer Head Screw 10-24 x 1-1/4" Lg (100 per	hag)	14-2223-01-R100	
Drain Plug and Gasket (2 per bag) 31-1609-06-R50	0	Hey Flange Nut #10-24 (6 per han)	2081	14-3971-03-R6	
Drain Plug and Gasket (2 per bag) 31-1609-06-R50	3	Hex Flange Nut #10-24 (5 per bag)			
Drain Plug and Gasket (2 per bag) 31-1609-06-R50	10	Strainer/Case Assembly		40 0000 00 D	
12 Strainer Basket with handle 16-0729-02-R 12a Strainer Basket Handle 89-7303-10-R 13 Strainer O-ring 47-0352-09-R 14 Strainer Cover 39-0753-04-R 15 Strainer Nut 42-1678-09-R 16 Splash Cover 85-8733-10-R 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 14-2256-01-R3 18 Pump Base 12-2506-27-R 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 14-1296-13-R 20 Washer 14-0740-25-R 21 Motor Support Bracket 85-8743-00-R 22 Toggle Switch 23-1993-00-R 23 1 Piece Rubber Boot and Nut 23-3882-01-R 24 Power Cord with Plug for: 24 Model 5LRC-48-S1 23-8328-60-R 25 Model 15LRC-5-48-S1 32-8328-60-R 27 Model 15LRC-5-48-S1 423-8328-60-R 28 Model 15LRC-5-48-S1 423-8328-60-R 29 Model 15LRC-7-48-S1 23-8328-60-R 29 Model 15LRC-7-48-S1 23-8328-60-R 20 Model 15LRC-7-48-S1 23-8328-60-R 21 Model 15LRC-7-48-S1 23-8328-70-R 22 Model 15LRC-7-48-S1 23-8328-70-R 23 Black Plate 85-6723-10-R 24 Pan Head Screw #8 x 3/4" Lg (4 per bag) 14-2365-09-R4		Drain Plus and Gasket (2 per heat)		31-1609-06-R2	
12 Strainer Basket with handle 12a Strainer Basket Handle 12a Strainer Gover 13 Strainer O-ring 14 7-0352-09-R 15 Strainer Nut 15 Strainer Nut 16 Splash Cover 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 18 Pump Base 19 12-2506-27-R 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 10 Washer 11 Motor Support Bracket 12 Toggle Switch 12 Toggle Switch 13 Piece Rubber Boot and Nut 14 Power Cord with Plug for: 15 Model 7LRC-48-S1 16 Model 15LRC-5-48-S1 17 Model 15LRC-5-48-S1 18 Model 15TLRC-7-48-S1 18 Model 15TLRC-7-48-S1 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 10 Washer 11 Washer 12 Washer 13 Washer 14-0740-25-R 15-8743-00-R 15-8743-00-R 15-8743-00-R 17 Washer 18 Washer 19 Washer 10 Washer 10 Washer 10 Washer 11 Washer 12 Washer 12 Washer 13 Washer 14-0740-25-R	11	Drain Plus and Gasket (50 per hag)		31-1609-06-R50	
12a Strainer Basket Handle 13 Strainer O-ring 14 Strainer Cover 15 Strainer Rut 15 Strainer Nut 16 Splash Cover 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 18 Pump Base 19 12-2506-27-R 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 10 Washer 11 Wotor Support Bracket 12 Toggle Switch 12 Toggle Switch 13 Power Cord with Plug for: 15 Model 7LRC-48-S1 16 Model 15LRC-5-48-S1 17 Model 15LRC-5-48-S1 18 Model 15TLRC-7-48-S1 18 Pump Base 19 14-2256-01-R3 12-2506-27-R 19 14-2265-01-R3 12-2506-27-R 19 14-2265-01-R3 12-2506-27-R 10 14-2265-01-R3 12-2506-27-R 11 14-2265-01-R3 12-2506-27-R 12-25	12	Strainer Resket with handle	SV TO COMPANY	16-0729-02-R	
Strainer O-ring 47-0352-09-R		Strainer Backet Handle	1 100% ES Selv 11 10	89-7303-10-R	
14 Strainer Cover 35-0/53-04-R 15 Strainer Nut 42-1678-09-R 16 Splash Cover 85-6733-10-R 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 14-2256-01-R3 18 Pump Base 12-2506-27-R 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 14-1296-13-R 20 Washer 14-0740-25-R 21 Motor Support Bracket 85-8743-00-R 22 Toggle Switch 23-1993-00-R 23 1 Piece Rubber Boot and Nut 23-3882-01-R 24 Power Cord with Plug for: 23-8328-60-R Model 5LRC-48-S1 23-8328-60-R Model 7LRC-5-48-S1 23-8328-60-R Model 15LRC-5-48-S1 23-8328-60-R Model 15LRC-7-48-S1 23-8328-60-R Model 15TLRC-7-48-S1 23-8328-70-R 25 Insulated Wire (Black) 23-8328-50-R 26 Black Plate 85-6723-10-R 27 Pan Head Screw #8 x 3/4" Lg (4 per bag) 14-2365-09-R4		Strainer O ring	- 7 Ph		
15 Strainer Nut 42-1678-09-R 16 Splash Cover 85-8733-10-R 17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 14-2256-01-R3 18 Pump Base 12-2506-27-R 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 14-1296-13-R 20 Washer 14-0740-25-R 21 Motor Support Bracket 85-8743-00-R 22 Toggle Switch 23-1993-00-R 23 1 Piece Rubber Boot and Nut 23-3882-01-R 24 Power Cord with Plug for:	577	Strainer Cours			
17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 18 Pump Base 12-2506-27-R 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 14-1296-13-R 20 Washer 14-0740-25-R 21 Motor Support Bracket 23-1993-00-R 23 1 Piece Rubber Boot and Nut 23-3882-01-R 24 Power Cord with Plug for: Model 5LRC-48-S1 Model 7LRC-5-48-S1 Model 7LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-7-48-S1		Strainer Cover		42-1678-09-R	
17 Pan Head Screw #8 x 1/2" Lg (3 per bag) 18 Pump Base 12-2506-27-R 19 Hex Cap Screw #3/8-16 x 1-1/4" Lg 14-1296-13-R 20 Washer 14-0740-25-R 21 Motor Support Bracket 23-1993-00-R 23 1 Piece Rubber Boot and Nut 23-3882-01-R 24 Power Cord with Plug for: Model 5LRC-48-S1 Model 7LRC-5-48-S1 Model 7LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-7-48-S1		Strainer Nut	that is not a second	85-8733-10-R	
12-2506-27-R 19					
19	5.5				
20 Washer 14-0740-25-R 21 Motor Support Bracket 85-8743-00-R 22 Toggle Switch 23-1993-00-R 23 1 Piece Rubber Boot and Nut 23-3882-01-R 24 Power Cord with Plug for: Model 5LRC-48-S1 23-8328-60-R Model 7LRC-5-48-S1 23-8328-60-R Model 1LRC-5-48-S1 23-8328-60-R Model 15LRC-5-48-S1 23-8328-60-R Model 15LRC-5-48-S1 23-8328-60-R Model 15LRC-7-48-S1 23-8328-60-R Model 15LRC-7-48-S1 23-8328-70-R Model 15TLRC-7-48-S1 23-8328-70-R Model 15TLRC-7-48-S1 23-8328-70-R Black Plate 85-6723-10-R 26 Black Plate 85-6723-10-R	9.7	11 0 0			
21 Motor Support Bracket 85-8743-00-R 22 Toggle Switch 23-1993-00-R 23 1 Piece Rubber Boot and Nut 23-3882-01-R 24 Power Cord with Plug for:	2.7				
22 Toggle Switch 23-1993-00-R 23 1 Piece Rubber Boot and Nut 23-3882-01-R 24 Power Cord with Plug for:					
23 - 3882-01-R 24 Power Cord with Plug for: Model 5LRC-48-S1 Model 7LRC-48-S1 Model 7LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-7-48-S1 Model 15LRC-7-48-S1 Model 15LRC-7-48-S1 Model 15LRC-7-48-S1 Model 15LRC-7-48-S1 Model 15LRC-7-48-S1 Black Plate 23 - 8328-70-R 25 Insulated Wire (Black) Black Plate 27 Pan Head Screw #8 x 3/4" Lg (4 per bag) 23 - 8328-01-R	-				
24 Power Cord with Plug for: Model 5LRC-48-S1 Model 7LRC-48-S1 Model 7LRC-5-48-S1 Model 1LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15TLRC-7-48-S1	-				
Model 5LRC-48-S1 Model 7LRC-48-S1 Model 7LRC-5-48-S1 Model 7LRC-5-48-S1 Model 1LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15TLRC-5-48-S1 Model 15TLRC-7-48-S1 Model 15TLRC-7-48-S1 Model 15TLRC-7-48-S1 Model 5TLRC-7-48-S1 Model 5TLRC				23-3002-01-11	
Model 7LRC-48-S1 Model 7LRC-48-S1 Model 7LRC-5-48-S1 Model 1LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15TLRC-5-48-S1 Model 15TLRC-5-48-S1 Model 15TLRC-7-48-S1 Mo	24			22 9229 EO B	
Model 7LRC-5-48-S1 Model 1LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-5-48-S1 Model 15LRC-7-48-S1 Model 15LRC-7-48-S1 Model 15LRC-7-48-S1 Model 15LRC-7-48-S1 Model 15LRC-7-48-S1 Model 15LRC-7-48-S1 23-8328-70-R 24-8328-70-R 25 Insulated Wire (Black) 23-8328-50-R 26 Black Plate 27 Pan Head Screw #8 x 3/4" Lg (4 per bag) 14-2365-09-R4					
Model 1LRC-5-48-S1 23-8328-60-R Model 15LRC-5-48-S1 23-8328-60-R Model 15TLRC-5-48-S1 23-8328-60-R Model 15TLRC-7-48-S1 23-8328-70-R Model 15TLRC-7-48-S1 23-8328-70-R 25 Insulated Wire (Black) 23-8328-50-R Black Plate 85-6723-10-R 27 Pan Head Screw #8 x 3/4" Lg (4 per bag) 14-2365-09-R4					
Model 15LRC-5-48-S1 23-8328-60-R Model 15TLRC-5-48-S1 23-8328-60-R Model 15TLRC-7-48-S1 23-8328-70-R Model 15TLRC-7-48-S1 23-8328-70-R 25 Insulated Wire (Black) 23-8328-50-R 26 Black Plate 85-8723-10-R 27 Pan Head Screw #8 x 3/4" Lg (4 per bag) 14-2365-09-R4					
Model 15TLRC-5-48-S1 Model 15TLRC-7-48-S1 Model 15TLRC-7-48-S1 Model 15TLRC-7-48-S1 23-8328-70-R 25 Insulated Wire (Black) Black Plate 27 Pan Head Screw #8 x 3/4" Lg (4 per bag) 23-8328-50-R 24-2365-09-R4					
Model 15LRC-7-48-S1 Model 15TLRC-7-48-S1 Model 15TLRC-7-48-S1 23-8328-70-R 25 Insulated Wire (Black) 26 Black Plate 27 Pan Head Screw #8 x 3/4" Lg (4 per bag) 23-8328-50-R 85-8723-10-R 14-2365-09-R4					
Model 15TLRC-7-48-S1 23-8328-70-R 25 Insulated Wire (Black) 23-8328-50-R 26 Black Plate 85-8723-10-R 27 Pan Head Screw #8 x 3/4" Lg (4 per bag) 14-2365-09-R4				And the second s	
25 Insulated Wire (Black) 23-8328-50-R 26 Black Plate 85-8723-10-R 27 Pan Head Screw #8 x 3/4" Lg (4 per bag) 14-2365-09-R4					
26 Black Plate 85-8723-10-R 27 Pan Head Screw #8 x 3/4" Lg (4 per bag) 14-2365-09-R4	10.00				
27 Pan Head Screw #8 x 3/4" Lg (4 per bag) 14-2365-09-R4	900000				
Z/ Fall flead Sciew #0 x 5/4 Lg (4 por bag)	655.50				
	5555			14-2365-09-H4 23-8328-51-R	
28 Insulated Wire (Red) (for 2-speed only) 23-8328-51-R	28	Insulated Wire (Red) (for 2-speed only)		Z3-83Z8-31-N	

Les Équipements de Piscines Carvin Inc.
Carvin Pool Equipment Inc.
4000 Boul. Casavant O. St-Hyacinthe,
(Québec) Canada J2S 9E3

Tél: 450-250-4500 : Fax : 450-250-450 Sans Frais = Toll Free : 1-866-979-4501 http://www.carvinpool.com ≈ CARVIN ≈

CARVIN EQUIPMENT INC LIMITED WARRANTY

Carvin Equipment Inc. ("Carvin") warrants "Carvin" pool products to be free of defects in material and workmanship for a period of 12 months from the date of purchase with the following exceptions:

Light Bulbs: Full Moon Watercolor LED light bulbs are warranted for 12 months from the date of purchase; incandescent bulbs are warranted for 90 days from the date of purchase.

Misc: Filter elements, DE grids, white-goods, strainer baskets, strainer basket "flap" and "priming tube", pressure gauges, square rings, orings, gaskets, and all replacement parts are warranted for 12 months from the date of purchase.

CONDITION IN ORDER TO EXERCISE THE WARRANTY:

In order to activate this 12 months warranty, "Carvin" products must be registered with "Carvin" by either of the following method: Mail-in the Warranty Registration Card. Online at www.carvinpool.com

All defects must be denounced within 72 hours in order to avoid the spreading to other equipment, failing which; the present warranty will not be honoured. This warranty is non transferable and extends only to the original retail buyer and only during the time in which the original retail buyer occupies the site where the product was originally installed. "Carvin" warranty obligation with regard to equipment which it does not itself manufacture is limited to the warranty actually extended to "Carvin" by its suppliers (i.e. motors).

This warranty applies to products used in swimming pools, spas, & aquaculture applications only and does not apply to any product which has been subjected to negligence, alteration, accident, abuse, misuse, improper installation, abrasives, corrosion, improper voltage supply, vandalism, civil disturbances, or acts of God (including but not limited to damage caused by freezing, lightning strikes, and other damage caused by catastrophic events). The only warranties authorized by "Carvin" are those set forth herein. "Carvin" does not authorize other persons to extend any warranties with respect to its products, nor will "Carvin" assume liability for any unauthorized warranties made in connection with the sale of its products. "Carvin" will not be responsible for any statements that are made or published, written or oral, which are misleading or inconsistent with the facts as published in the literature or specifications furnished by "Carvin".

WARRANTY CLAIM PROCEDURE

Warranty claims shall be made by contacting the installer/seller, builder, dealer, or retailer (point of purchase) or the "Carvin" pool products distributor in your area. All equipment must be inspected by a local "Carvin" authorized representative or at the factory before warranty is authorized. All charges or expenses for freight to and from the factory, removal and reinstallation of the products, or installation of a replacement product are the responsibility of the purchaser unless otherwise expressly authorized in writhing by "Carvin". "Carvin", at its discretion, may repair or replace free of charge (F.O.B. factory in St-Hyacinthe, Québec, Canada) any product that proves defective within the warranty period, or it may issue credit in the amount of the invoice of the defective equipment in lieu of its repair or replacement. "Carvin" reserves its right to substitute new or improved equipment on any replacements

REV.2

WARRANTY REGISTRATION
ENREGISTREMENT DE GARANTIE



Please send this filled Warranty registration to: S.V.P envoyer cet Enregistrement de Garantie dûment rempli à :

Carvin Pool Equipment Inc.

Les Équipements de Piscines Carvin Inc.

4000 Boul. Casavant O. St-Hyacinthe

(Québec) Canada J2S 9E3

Or/Ou

Fill the Warranty Registration form <u>Online</u> at:

Remplissez le Formulaire d'Enregistrement de Garantie

<u>en ligne</u> au:

http://www.carvinpool.com/catalog/garantie.php



		O Filter/Filtreur
The second secon		O Pump/Pompe
Name/Nom	E. Commission of the Commissio	1995年中1797年14年
	# TEXT A FILE 21	Translation of the
Address/Adresse	The second secon	
City/Ville	Province	P.C/C.P
10.00000000000000000000000000000000000	Committee and Belle Land State and the State	STORY OF STORY
Date of purchase/d'achat	Serial No./Sé	rie
Pool capacity (Imp.Gals.)	Filter Model No.	V v
Contenance de la piscine (gal.imp.)	No. de modèle du	filtre
Pump make and H.P.	and the second s	STATE OF THE STATE
Marque et H.P. de la pompe		
A STATE OF THE SERVICE SERVICE AND ASSESSMENT OF THE PROPERTY		-25 Sept. 2
Type of pool Concrete Vinyl Type de piscine Béton Vinyle	Fiberglass New Inst	allation Replacement
Type of pool Concrete Vinyl Type de piscine Béton Vinyle Old filter make and type/Marque et ty	Fiberglass New Inst	Replacement Remplacement
Type of pool Concrete Vinyl Type de piscine Béton Vinyle Did filter make and type/Marque et ty	Fiberglass New inst Fibre de verre Nouvelle pe de l'ancien filtre	Replacement Remplacement
Type of pool Concrete Vinyl Type de piscine Béton Vinyle Old filter make and type/Marque et ty	Fiberglass Fibre de verre Nouvelle pe de l'ancien filtre Address/Adress	Replacement Remplacement
Type of pool Concrete Vinyl Type de piscine Béton Vinyle Old filter make and type/Marque et ty	Fiberglass Fibre de verre Nouvelle pe de l'ancien filtre Address/Adress	Replacement Remplacement
Type of pool Concrete Vinyl Type de piscine Béton Vinyle Did filter make and type/Marque et ty Purchase of: Name/Nom Acheté de: City/ville	Province	Replacement Remplacement P.C./C.P
Type of pool Concrete Vinyl Type de piscine Béton Vinyle Did filter make and type/Marque et ty Purchase of: Name/Nom	Province	Replacement Remplacement P.C./C.P
Type of pool Type de piscine Concrete Vinyle Béton Vinyle Purchase of: Name/Nom Acheté de: City/ville Installed by: Name/Nom Installé par:	Province	Replacement Remplacement P.C./C.P
Type of pool Type de piscine Concrete Vinyle Béton Vinyle Purchase of: Name/Nom Acheté de: City/ville Installed by: Name/Nom Installé par:	Province Address/Adress	Replacement Remplacement P.C./C.P

Carvin Pool Equipment Inc. Les Équipements de Piscines Carvin Inc.

CARVIN EQUIPMENT INC

Carvin Equipment Inc. ("Carvin") warrants "Carvin" pool products to be free of defects in material and workmanship for a period of 12 months from the date of purchase with the following exceptions:

<u>Light Bulbs:</u> Full Moon Watercolor LED light bulbs are warranted for 12 months from the date of purchase; incandescent bulbs are warranted for 90 days from the date of purchase.

<u>Misc</u>: Filter elements, DE grids, white-goods, strainer baskets, strainer basket "flap" and "priming tube", pressure gauges, square rings, o-rings, gaskets, and all replacement parts are warranted for 12 months from the date of purchase.

CONDITION IN ORDER TO EXERCISE THE WARRANTY:

In order to activate this 12 months warranty, "Carvin" products must be registered with "Carvin" by the following method:
Mail-in the Warranty Registration Card.
Online at www.carvinpool.com

All defects must be denounced within 72 hours in order to avoid the spreading to other equipment, failing which; the present warranty will not be honoured. This warranty is non transferable and extends only to the original retail buyer and only during the time in which the original retail buyer occupies the site where the product was originally installed. "Carvin" warranty obligation with regard to equipment which it does no itself manufacture is limited to the warranty actually extended to "Carvin" by its suppliers (i.e. motors).

This warranty applies to products used in swimming pools, spas, & aquaculture applications only and does not apply to any product which has been subjected to negligence, alteration, accident, abuse, misuse, improper installation, abrasives, corrosion, improper voltage supply, vandalism, civil disturbances, or acts of God (including but not limited to damage caused by freezing, lightning strikes, and other damage caused by catastrophic events). The only warranties authorized by "Carvin" are those set forth herein. "Carvin" does not authorize other persons to extend any warranties with respect to its products, nor will "Carvin" assume liability for any unauthorized warranties made in connection with the sale of its products. "Carvin" will not be responsible for any statements that are made or published, written or oral, which are misleading or inconsistent with the facts as published in the literature or specifications furnished by "Carvin".

WARRANTY CLAIM PROCÉDURE

Warranty claims shall be made by contacting the installer/seller, builder, dealer, or retailer (point of purchase) or the "Carvin" poll products distributor in your area. All equipment must be inspected by a local: "Carvin" authorized representative or at the factory before warranty is authorized. All charges or expenses for freight to and from the factory, removal and reinstallation of the products, or installation of a replacement product are the responsibility of the purchaser unless otherwise expressly authorized in writhing by "Carvin". "Carvin", at its discretion, may repair or replace free of charge (F.O.B. factory in St-Hyacinthe, Québec, Canada) any product that proves defective equipment in lieu of its repair or replacement. "Carvin" reserves its right to substitute new or improved equipment on any replacements

Les Équipements de Piscines Carvin Inc. Garantie Limité

Les Équipements de Piscines Carvin Inc. ("Carvin") garantit que les produits de piscine "Carvin" sont exempts de tout défaut de fabrication et de main-d'œuvre pendant une période de 12 mois à compter de la date de l'achat. Les exceptions suivantes s'appliquent :

Ampoules : Les ampoules Aquarelle à DEL Full Moon sont garanties pendant 12 mois à compter de la date de l'achat, les ampoules halogènes sont garanties pendant 90 jours à compter de la date de

Divers : Les cartouches filtrantes, les grilles pour terre diatomée, les produits de recirculation (white goods), les paniers protège-crépine, le clapet et le tube d'amorçage du panier protège crépine, les manomètres, les joints d'étanchéité carrés, les joints toriques, les joints d'étanchéité et toutes les pièces de rechange sont garanties pendant 12 mois à compter de la date d'achat.

CONDITIONS D'EXERCICE DE LA GARANTIE :

Afin que cette garantie de 12 mois entre en vigueur, les produits "Carvin" doivent être enregistrés auprès de "Carvin" par le biais de la méthode suivante : En retournant par la poste la fiche de garantie; En ligne, au www.carvinpool.com

Toute défectuosité doit être dénoncée à "Carvin", ou à son représentant dans les 72 heures pour éviter le bris d'autres équipements, faute de quoi, la garantie ne sera pas honorée. Cette garantie est non transférable et ne s'applique qu'au premier acheteur au détail, et seulement pendant la période où le premier acheteur au détail occupe l'endroit où le produit a été installé initialement. L'obligation de garantie de "Carvin" concernant l'équipement que l'entreprise ne fabrique pas ellemême est limitée à la garantie offerte à "Carvin" par ses fournisseurs (i.e. moteurs).

Cette garantie ne s'applique qu'aux produits utilisés pour les piscines, les spas et l'aquaculture, et ne s'applique pas aux produits qui ont subi des modifications, un accident, une mauvaise utilisation, une utilisation négligente, une utilisation abusive, une installation incorrecte, des applications d'abrasifs, de la corrosion, une tension incorrecte, du vandalisme, des troubles publics ou une catastrophes naturelle (y compris, notamment, les dommages causés par le gel, la foudre, et tout autre dommage causé par des catastrophes naturelles). Les seules garanties autorisées par "Carvin" sont énoncées dans la présente section. "Carvin" n'autorise aucune autre personne à garantir ses produits, et l'entreprise n'assumera aucune responsabilité face à toute garantie non autorisée faite relativement à la verite de ses produits. "Carvin" ne sera pas tenue responsable de toute déclaration faite ou publiée, écrite ou verbale qui serait trompeuse ou incompatible avec les faits publiés dans la documentation ou les spécifications fournies par "Carvin".

PROCÉDURE DE RÉCLAMATION EN VERTU DE LA GARANTIE

PROCEDURE DE RECLAMATION EN VERTU DE LA GARANTIE

Les réclamations en vertu de la garantie seront faites en communiquant avec l'installateur/vendeur, le constructeur, le revendeur ou le détaillant (point de vente) ou avec le distributeur "Carvin" de votre région. Tout équipement doit être inspecté par un représentant autorisé local de "Carvin" ou à l'usine avant l'autorisation de la garantie. Tous les frais ou toutes les dépenses d'expédition en partance de l'usine ou en direction de celle-ci, pour la désinstallation et la réinstallation des produits, ou pour l'installation d'un produit de remplacement, seront de la responsabilité de l'acheteur, sauf sur autorisation écrite de "Carvin". À sa discrétion, "Carvin" peut réparer ou remplacer sans frais (F.O.B usine à St-Hyacinthe, Québec, Canada) tout produit qui s'avère défectueux pendant la période de la garantie, ou elle peut émettre un crédit au montant de la facture de l'équipement défectueux au lieu de réparer ou de remplacer le produit. La société se réserve le doit de substituer de l'equipement nouveau ou amélioré lors de tout remplacement.

REV-2