

Notice

IMPORTANT: A gazebo may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.

It is important to read and follow all safety information prior to assembly of the unit as well as during usage to reduce risk of injury and avoid damage to the product and its surroundings.

It is highly recommended to avoid installing and settling your gazebo in a corridor of heavy wind.

Follow all assembly instructions.

Operation

The gazebo is intended to be used as a shelter, do not use the product for other than what it is designed for.

Your shelter has been created for all four seasons and will resist snow accumulations of up to 2000 lbs (910 Kg.) For your comfort and safety it is recommended to not use the gazebo during below-freezing temperature.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM ALL FABRICS. Do not place any type of space heater, any heat conductor or exposed flame under or within 5 feet of the gazebo.

The fabrics (mosquito netting and *curtains) meet the flammability requirements of CPAI-84. The fabrics may burn if they are in continuous contact with a flame. Any foreign substance applied directly to the any of the fabrics may weaken the flame-resistant properties.

Avoid using excessive force while opening or closing the mosquito netting. When tying the netting to the columns be mindful to not make the Velcro tangle with the netting.

Do not suspend or hang from the structure any object(s) exceeding 15 lbs (6.8 Kg.)

*IF YOU INTEND ON PURCHASING A SET OF CURTAINS: Follow the steps on page 27 (ACCESSORIES) for installation procedures.

**WINTER COVER:

Winter covers are available for this product. Contact your retailer for details.

Maintenance and Care

Check periodically that the gazebo is anchored properly to the floor or ground and that all bolts and screws are tight to maintain the solidity of the structure.

Remove any foreign objects from the roof as much as possible to avoid damages.

Remove any snow accumulation on the roof at all times. Make sure there is no ice buildup anywhere on the main structure. A winter cover is highly recommended.

The mosquito netting, and *curtains (sold separately), must be removed and stored during winter.

To order replacement parts you will refer to the Model # of this unit and the Part # in the Parts List.

Cleaning

Use only non-abrasive domestic soap or detergent and wash periodically with warm water using a soft sponge or fabric. Rinse with clean water.

Do not put the textilene mosquito netting (or *curtain) in a washing machine or dryer.

*Curtains are sold separately.

Warranty

NOTICE: The purchaser of this product has 30 days from date of purchase or delivery to verify their merchandise. Shipping fees are included for any missing parts or parts showing manufacturer defects. Damaged parts will not be under warranty after the 30-day period and all claims will be the responsibility of the purchaser.

DO NOT ASSEMBLE YOUR GAZEBO IF PARTS ARE DAMAGED. Contact your retailer or Club Piscine Super Fitness immediately.

Proof of purchase is necessary at all times. This warranty is not transferable.

IMPORTANT: This product is not a permanent structure. The gazebo can be left out during all seasons however snow accumulation must be removed at all times. It is possible to experience water leakage during heavy precipitation. This warranty is based on normal use of the product.

This product is guaranteed against defective materials from the factory including;

- Five (5) years on the frame against discoloration.
- Five (5) years on the roof panels against rust and discoloration.
- -Limited warranty applicable on parts only (contact your retailler.)

WHAT IS NOT COVERED

- Damages caused by abuse, misuse of this product or vandalism.
- Damages due to extreme natural weather conditions *such as, but not limited to,* rainstorms, hailstorms, wind storms, snow storms, etc..
- Water infiltration and holes in the roof panels are not covered.
- Damages due to the product not installed on a level ground or anchored down with appropriate screws.
- Damages caused by hanging or suspending objects heavier than 15 lbs (6.8 kg.)

IMPORTANT: If at any time you require assistance regarding the warranty of your gazebo contact Club Piscine Super Fitness customer service at 1-800-320-2979 or send an email to service@clubpiscine.ca. Any issues resulting from not following any rules, notices and regulations from Operation, Maintenance and Care, Cleaning and Pre-Assembly/Planning Installation and Safety will result in the warranty being voided.

Pre-assembly

PLANNING INSTALLATION AND SAFETY

Keep this User Guide and Parts List for future reference.

Make sure that the boxes contain all the parts before starting the assembly.

Follow all assembly instructions for proper construction.

In order to avoid damage to the shelter and its components, place all parts on a soft surface and use appropriate tools.

Do not assemble the gazebo during periods of heavy wind or rain.

It is highly recommended to avoid installing your gazebo in a corridor of heavy wind.

You must schedule enough time to complete the assembly. For safety issues you must not leave the unit unattended if it is not fully assembled, even if it is already anchored to the ground. The assembly will take approximately 6 to 7 hours.

A minimum of 2 people are required to assemble the gazebo .

The unit must be assembled on a level platform (wood deck, stone tile or concrete) and must be anchored using appropriate screws for that flooring.

Be sure to keep all children and pets away from assembly area.

To avoid damages the assembly of the unit should be constructed no less than 5 ft from any fixed obstruction.

In order to avoid damage to the shelter and its components, place all parts on a soft surface and use appropriate tools during assembly.

During assembly, do not use the structure as a support. Use a stepladder if necessary.

 
Some parts contain sharp edges; wear protective gloves when handling them. It is also recommended to wear protective goggles (safety glasses) and closed shoes.

It is recommended to tighten all bolts and screws once a step is completed.

If at any time you require assistance to assemble your gazebo contact your retailer.

TOOLS AND EQUIPMENT REQUIRED (Not included in boxes)

*NOTE: Tools and equipment are not shown to actual size and scale.







RUBBER MALLET

PHILLIPS SCREW DRIVER

DRILL

7/32" BIT





GLOVES





5/32" BIT



SAFETY HAT


SAFETY GOGGLES


S STEPLADDER

LEVEL

HARDWARE PACKAGE INCLUDED


*NOTE: Hardware is not shown to actual size and scale.

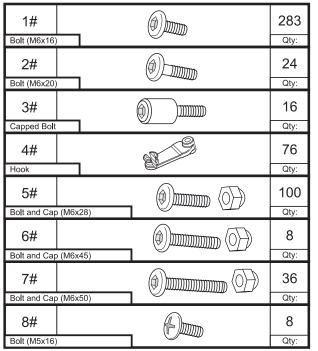

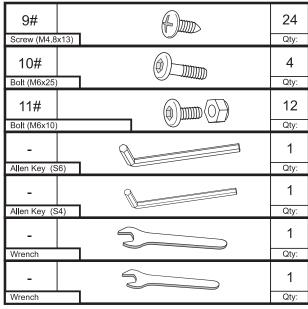

PARTS LIST

*NOTE: Parts are not shown to actual size and scale.

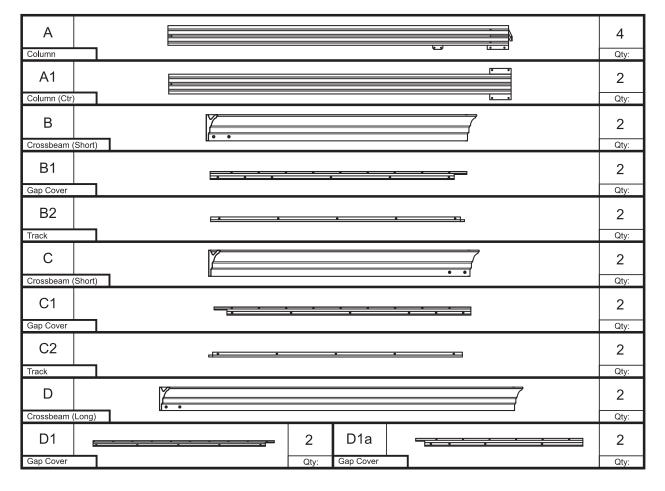


Pre-assembly


PARTS LIST

D2			2
Track			Qty:
Е //			2
Crossbeam (Long)		• •	Qty:
E1	2	E1a	2
Gap Cover	Qty:	Gap Cover	Qty:
E3			2
Track			Qty:
	2		2
Connector Plate	Z Qty:	Connector Plate	Qty:
G G H			6
Corner Gap Cover		Qty: Joint Cover	Qty:
	4		4
J1		J2	
	Qty:		Qty:
K E	1	K1	1
Roof Connector	Qty:	Roof Connector	Qty:
K2 (•) 2 L			2
Decorative Ball Qty: Base		Qty: Base	Qty:
M	4		2
Corner Roof Bar	Qty:	Roof Bar	Qty:
N1	4	N2	2
Roof Bar	Qty:	Roof Bar	Qty:
P F	2	P1	2
Finishing Bar (Upper Roof)	Qty:	Mosquito Mesh	Qty:
Q1	2	Q2	2
Finishing Bar (Upper Roof)	Qty:	Finishing Bar (Upper Roof)	Qty:
Q3	2	Q4	2
Mosquito Mesh	Qty:	Mosquito Mesh	Qty:
R 8 R1			148
Corner Gap Cover	er	O Qty: Spacer	Qty:
Τ	2	T1 🖉	2
Finishing Bar (Upper Roof)	Qty:	Finishing Bar (Upper Roof)	Qty:
T2	2	U1 <u>~~~~</u>	2
Finishing Bar (Upper Roof)	Qty:	Support Bar	Qty:
U2	2	112	2
Support Bar	Qty:	Support Bar	Qty:
	2		4
Support Bar	Qty:		Qty: 4
U6 • • •			
Iron Angle	Qty:	Support Bar	Qty:


Pre-assembly


PARTS LIST

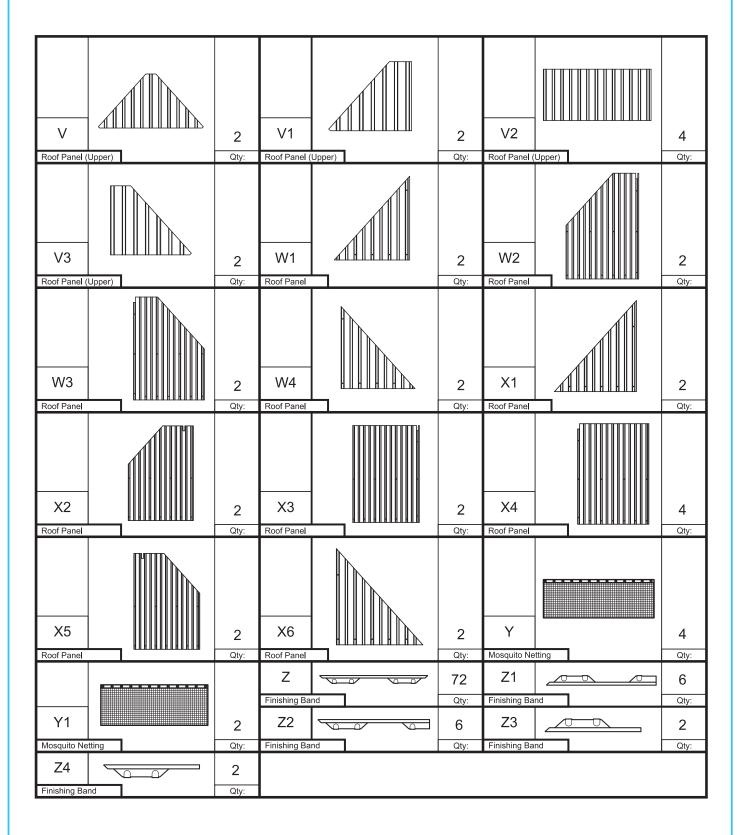

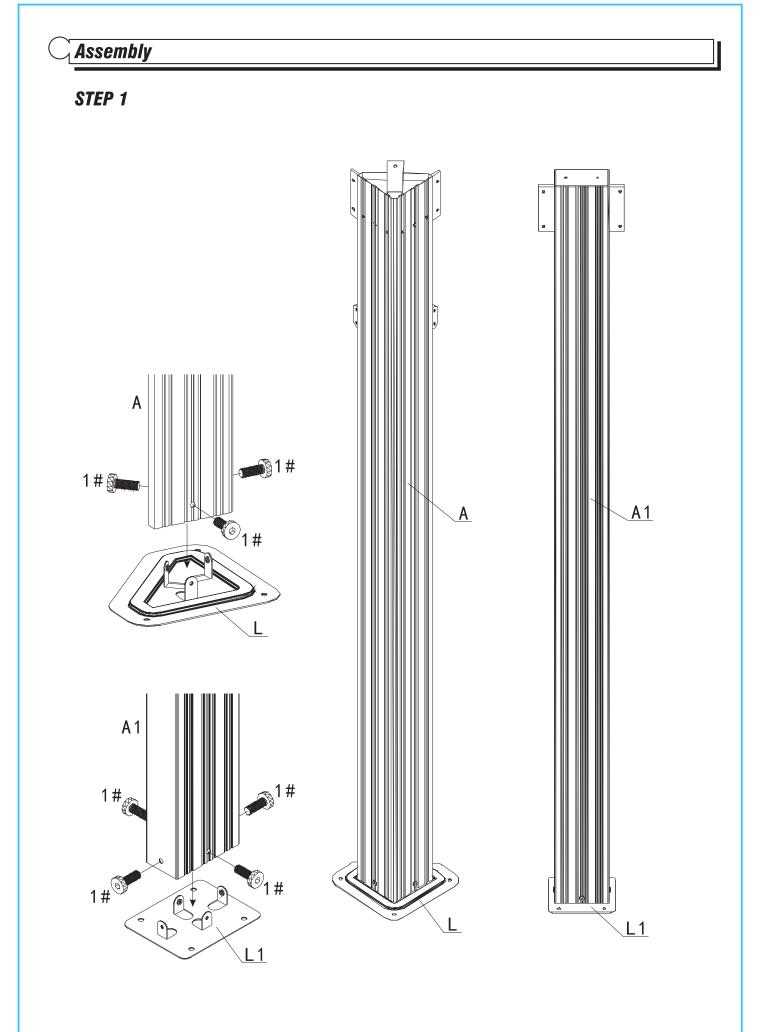


 
STEP 2

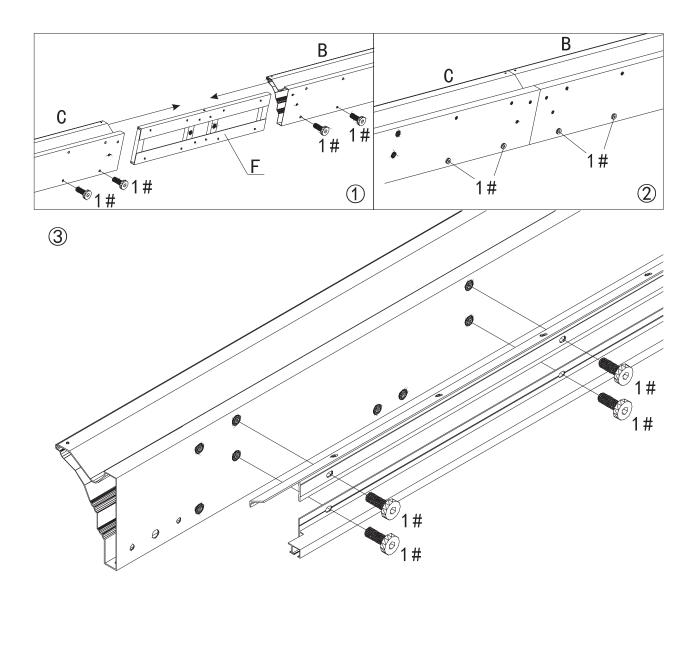





9

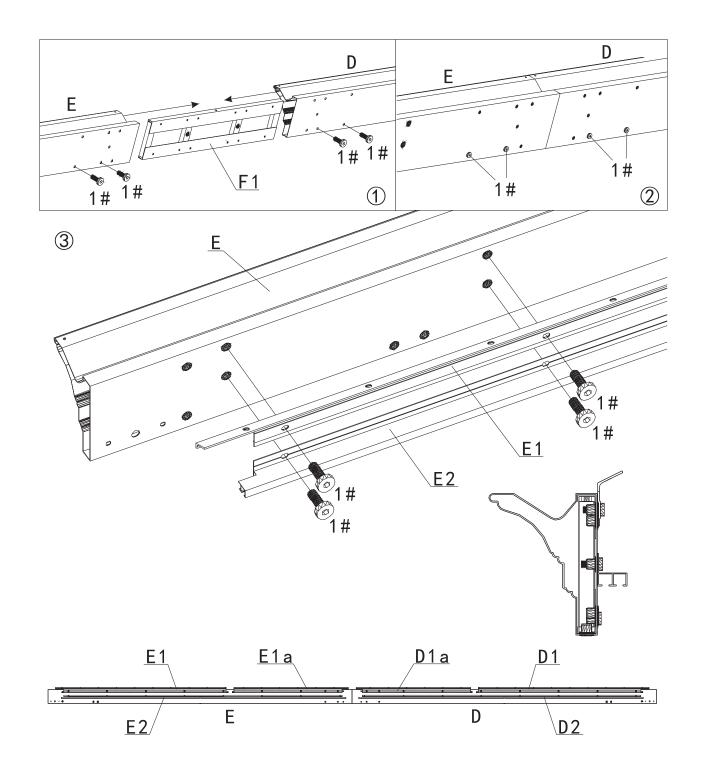


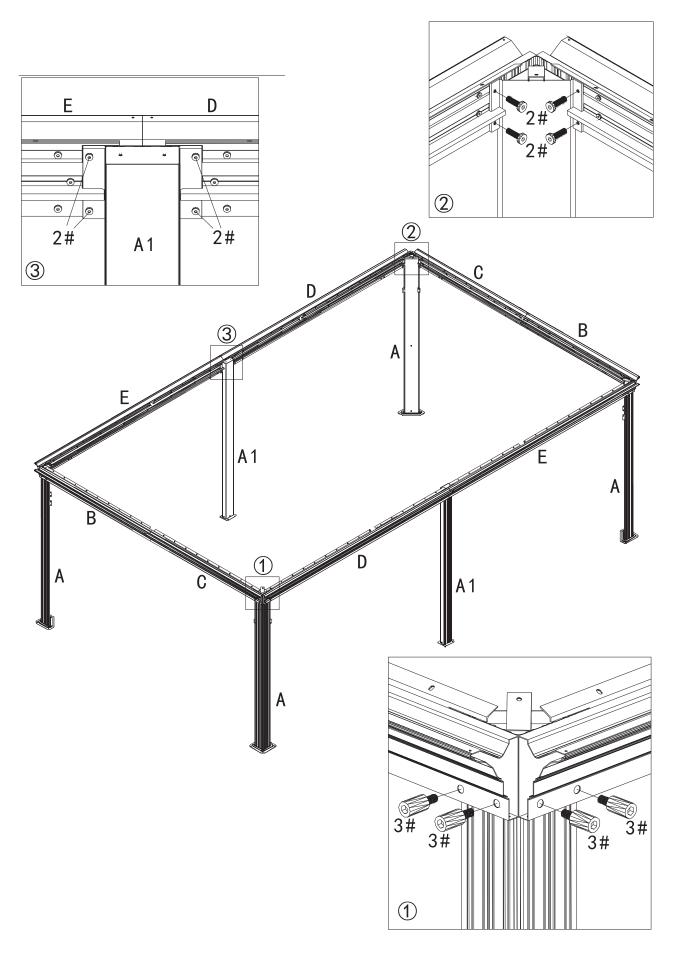

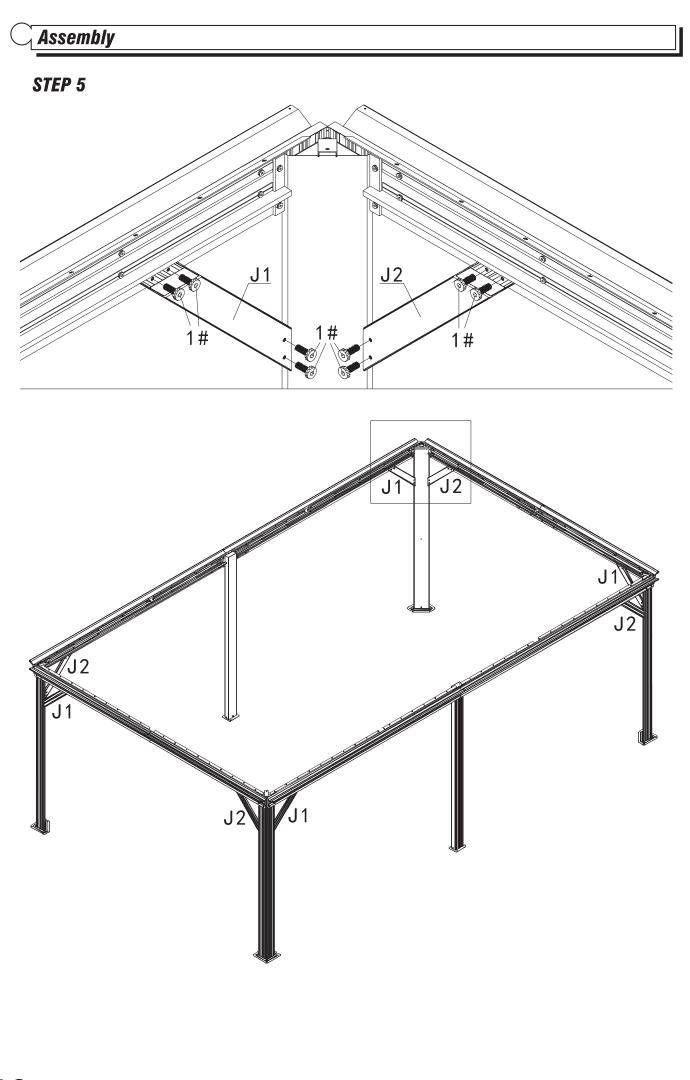




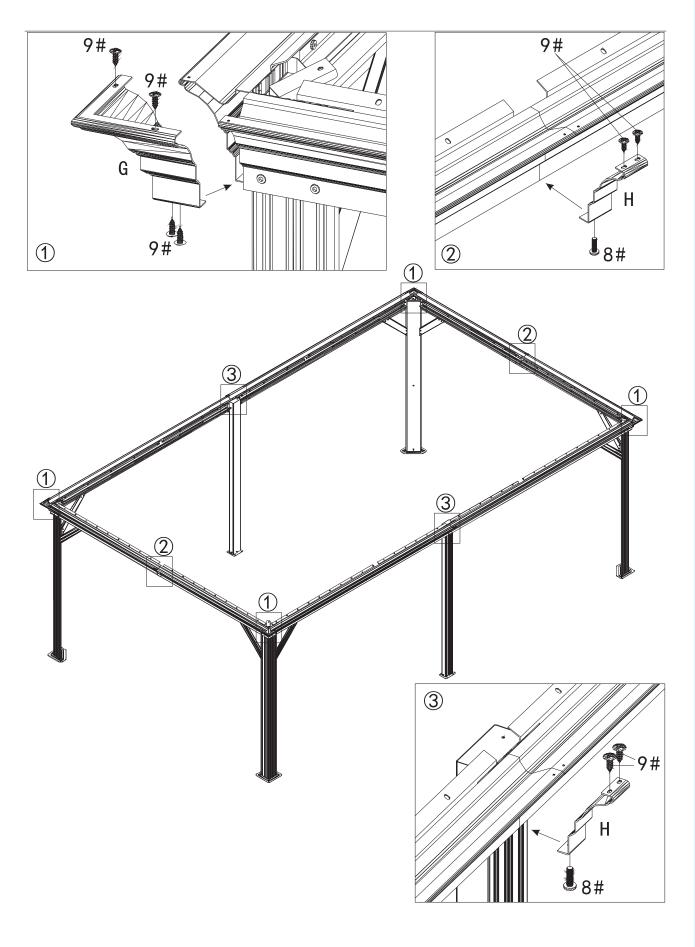


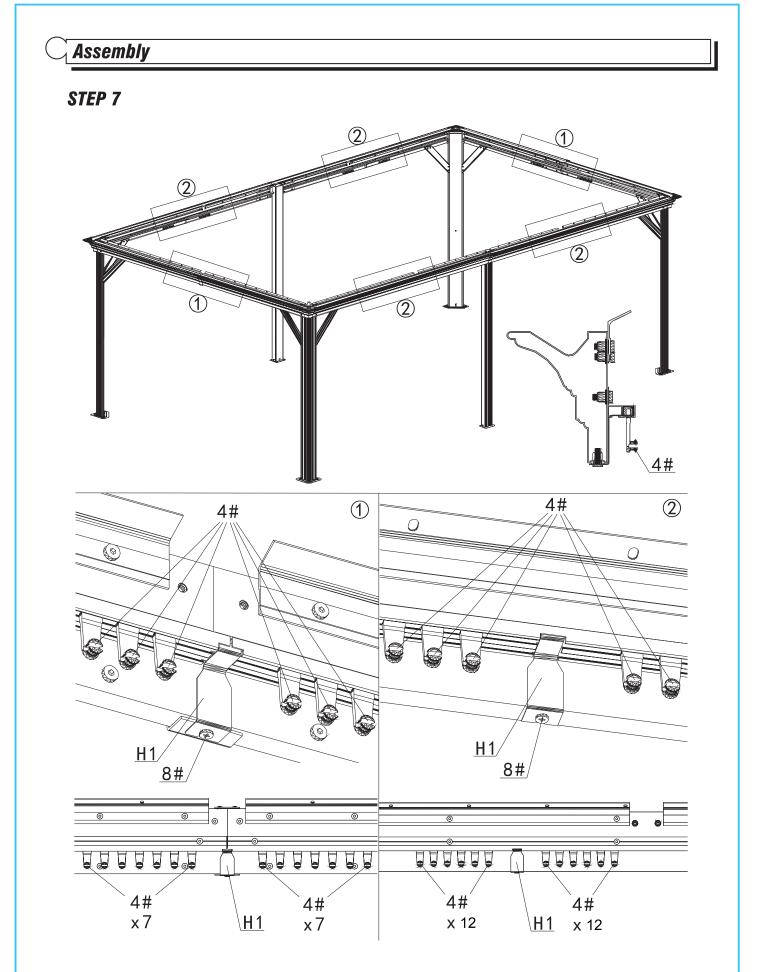



Insert 14 Hooks (4#) into the inside rail of track (B2 and C2) (7 per side) facing inward as per Illustration #1 and insert 24 Hooks (4#) into the inside rail of track (D2 and E2) (12 per side) facing inward as per illustration #2.


*If you plan on purchasing a set of curtains, follow the installation step on page 28.

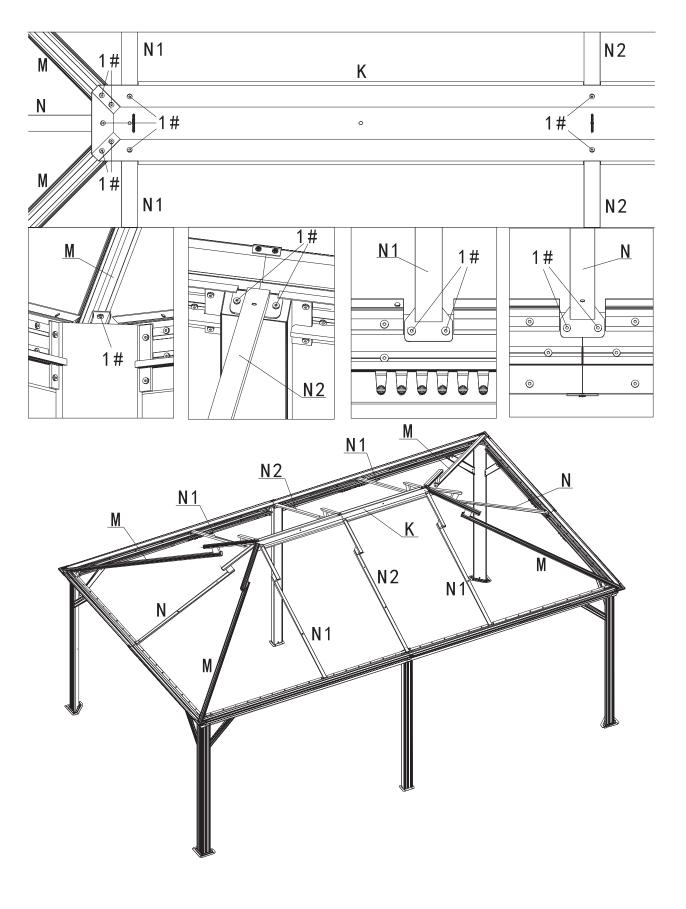


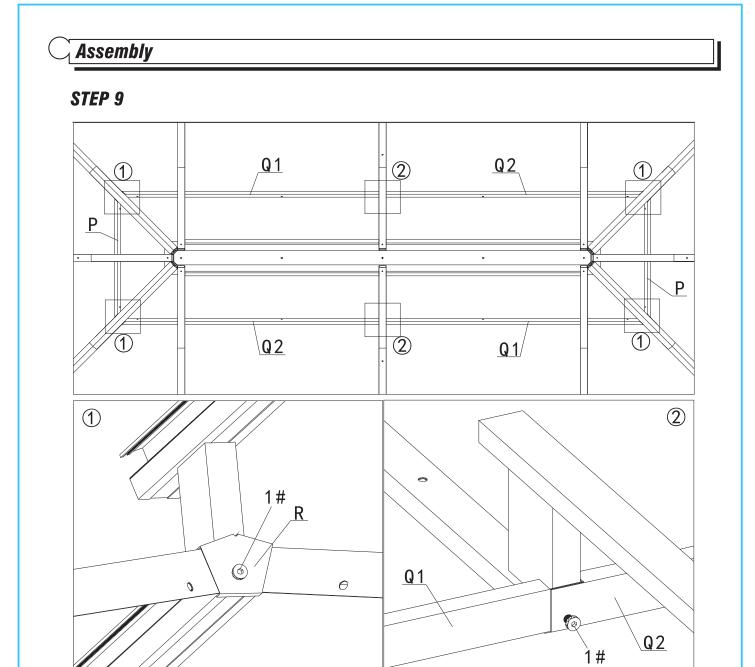


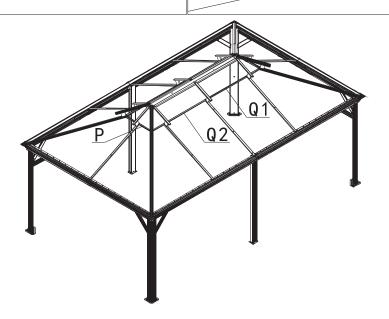


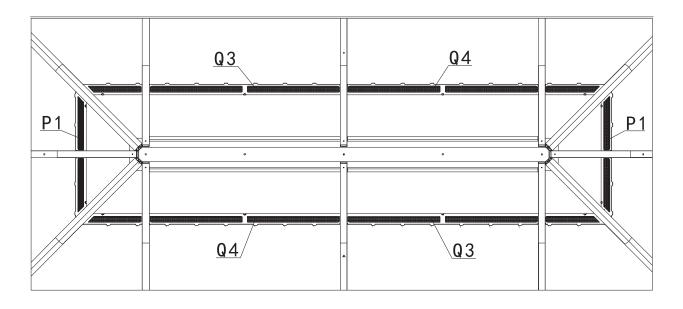


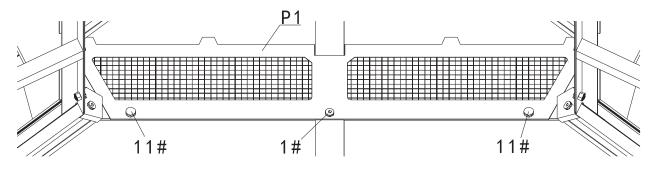

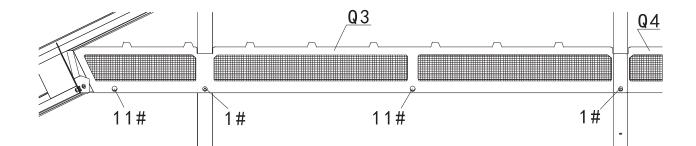

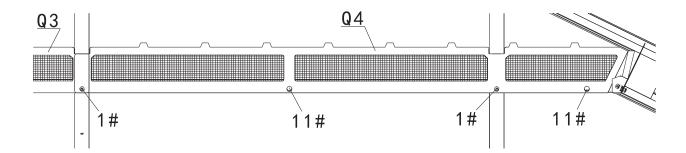


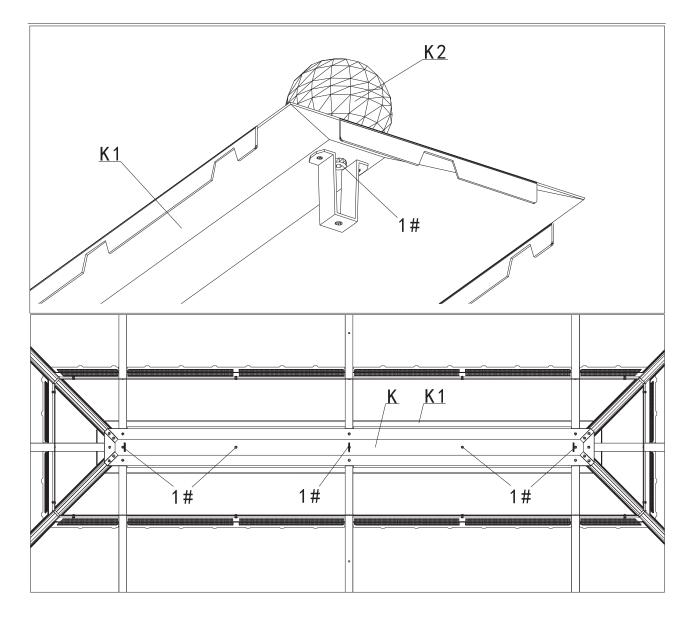

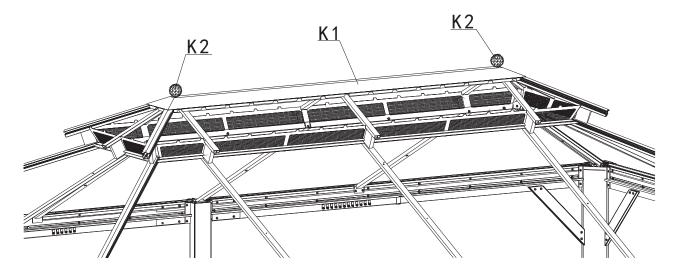







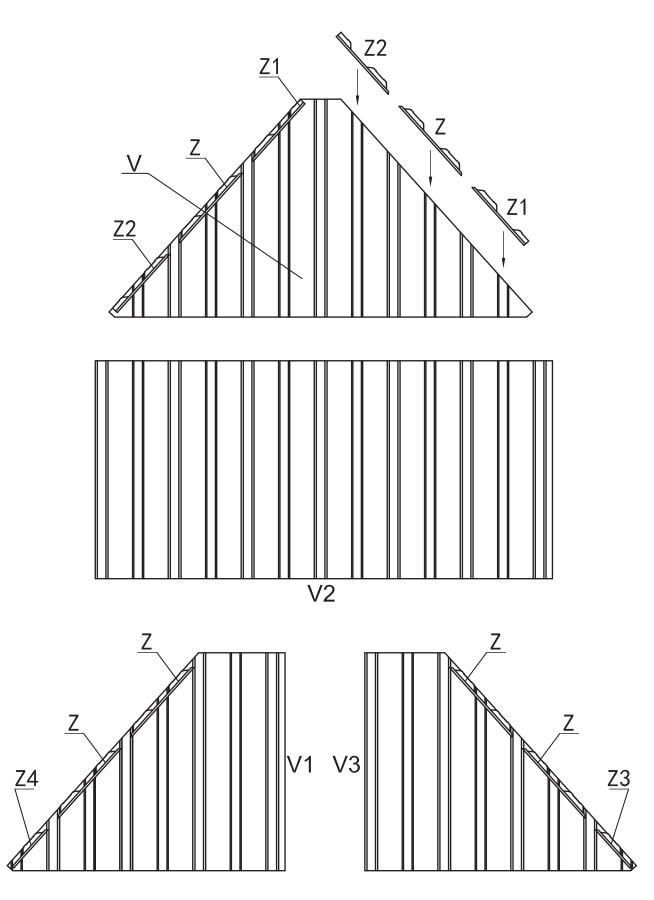



STEP 13

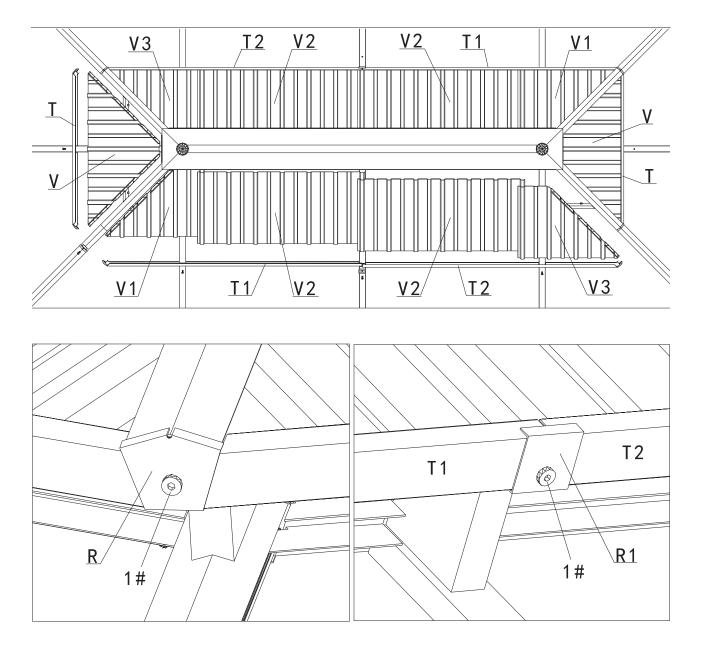


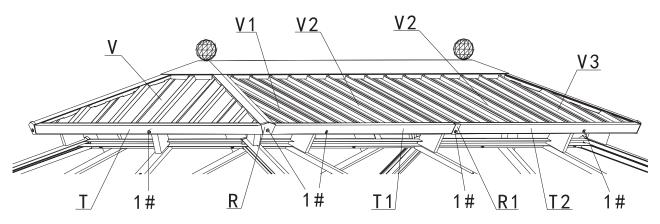



20

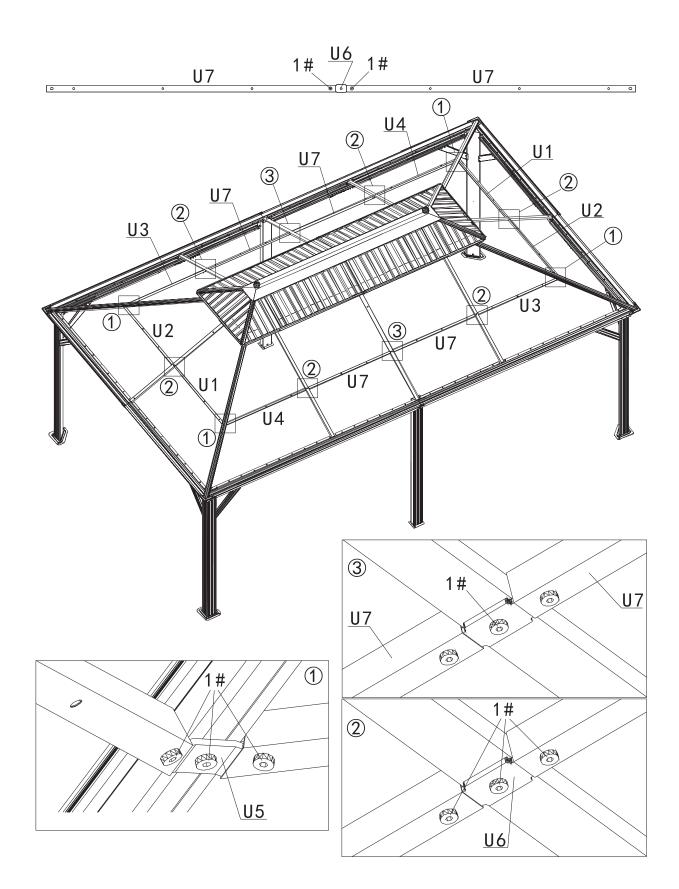

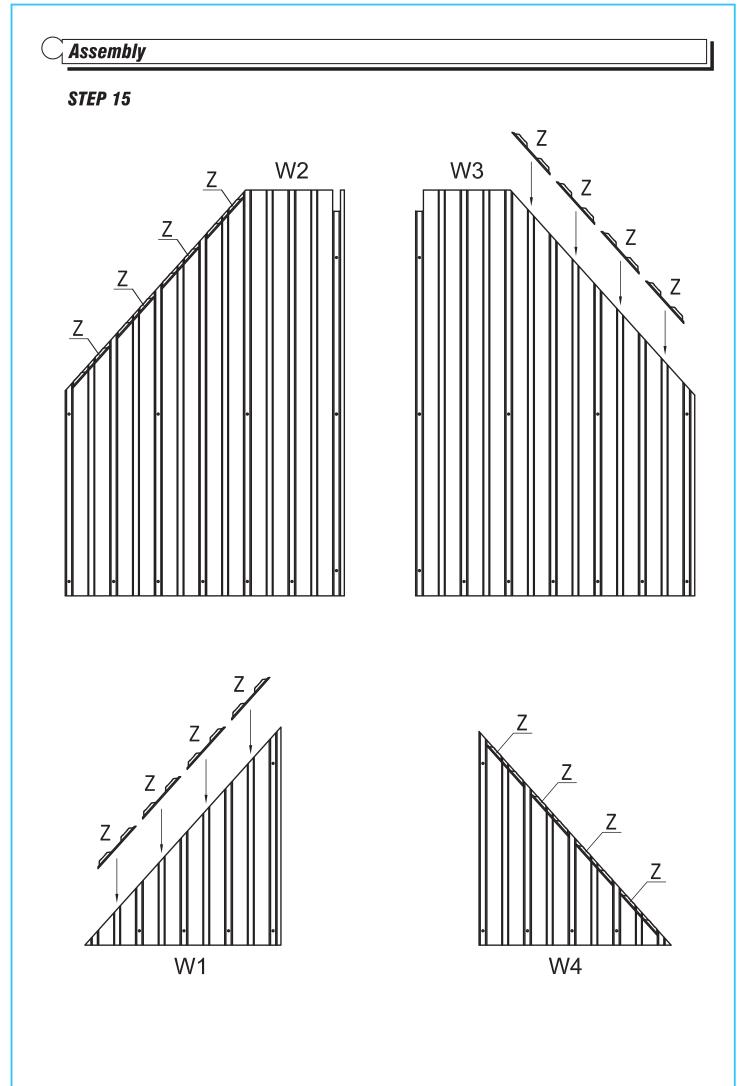

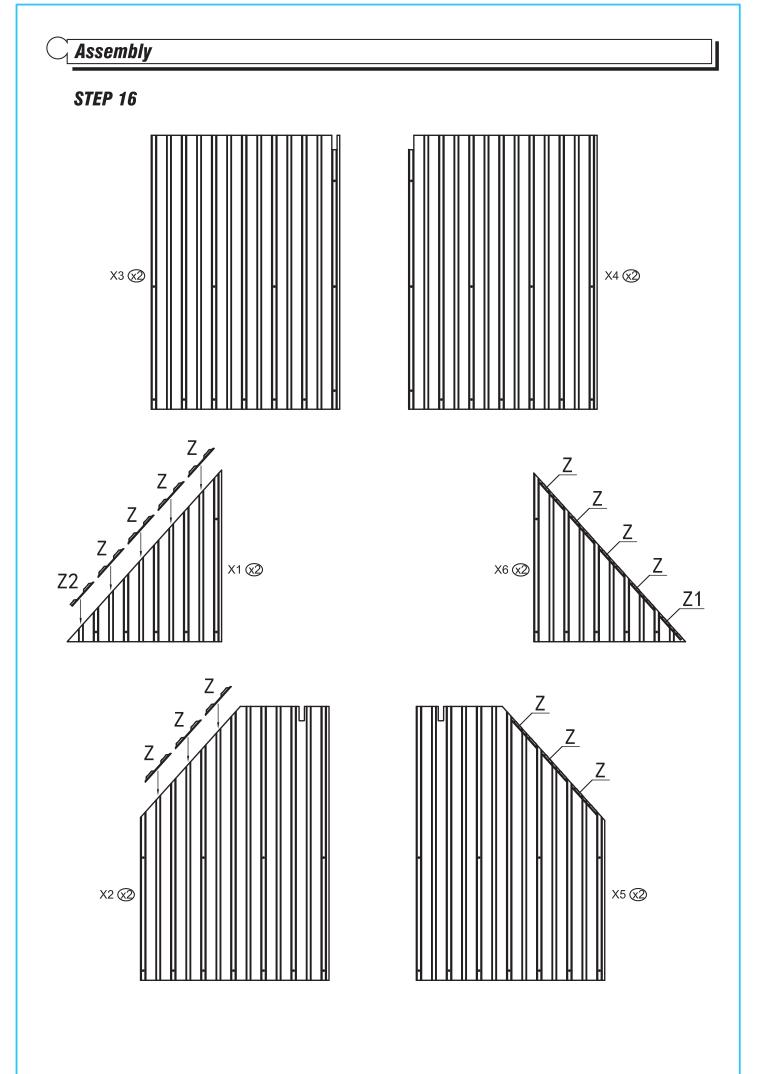

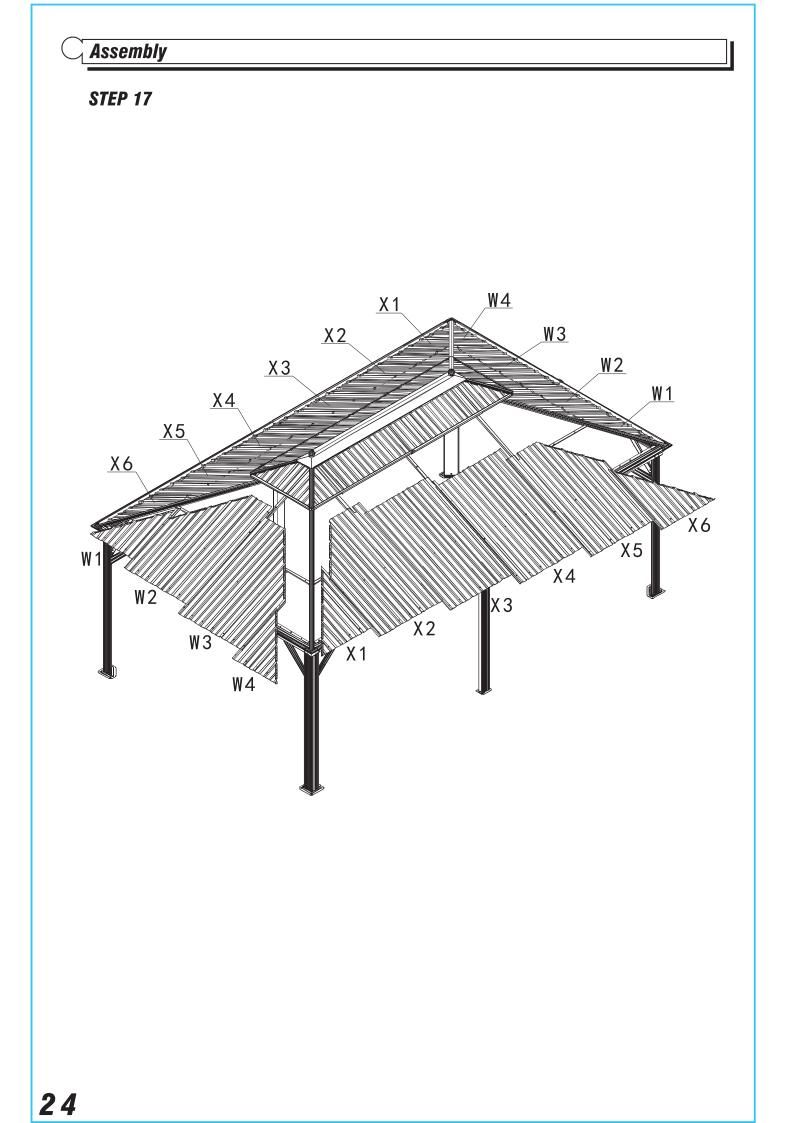

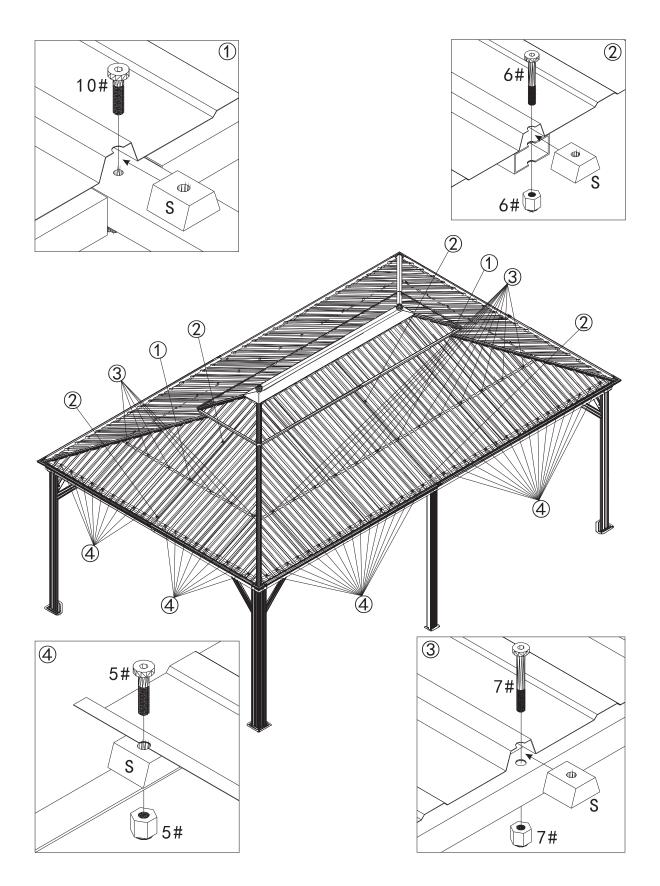

STEP 19


NOTE: The gazebo must be anchored to the ground or either wood, stone tiles or concrete using appropriate screws for that flooring. Camp nails cannot be used for permanent anchoring. Failure to do so will nullify the warranty.



STEP 20

Install the Mosquito Netting (Y and Y1) by inserting the eyelets into the Hooks (4#). Make sure that the zippers are at the center between the columns as illustrated.

Every mosquito netting and curtain section has a numbered tag at the top [1]. When installing them make sure the numbers at the top align in sequence (1-1; 2-2; 3-3; 4-4) as per the illustration below.

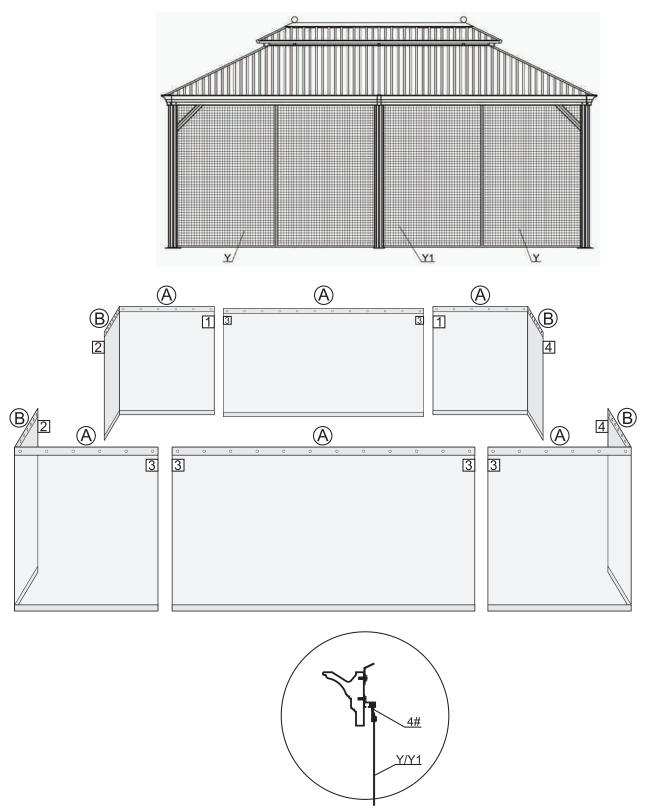


Accessories


*INSTALLATION OF CURTAINS; Outer tracks Follow these diagrams if buying a set of curtains

Install the Curtains by inserting the eyelets into the Hooks (4#). Make sure that the zippers are at the center between the columns as illustrated.

Every curtain section has a numbered tag at the top [1]. When installing them make sure the numbers at the top align in sequence (1-1; 2-2; 3-3; 4-4) as per the illustr. below.

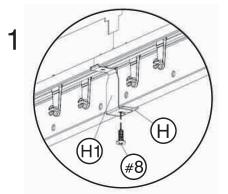

1: Remove the Joint Cover (H1)

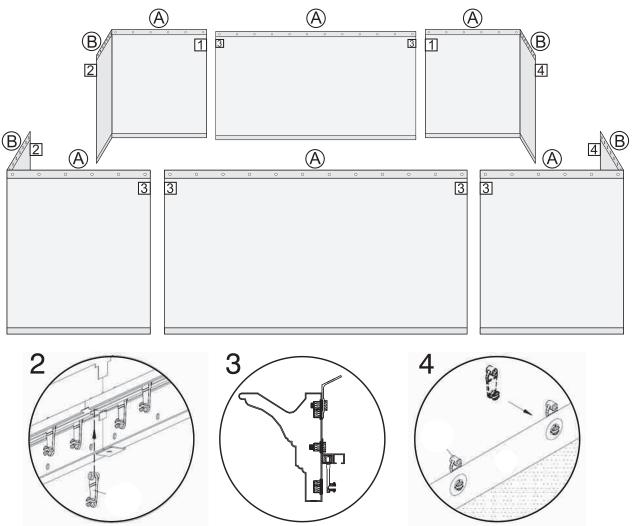

2, 3, 4: Insert 14 Hooks (4#) into the outside rail of track (B2 and C2) (7 per side) facing inward and insert 24 Hooks (4#) into the outside rail of track (D2 and E2) (12 per side) facing inward.

Reconnect the Joint Cover (H1).

